


Hood Hinge Replacement

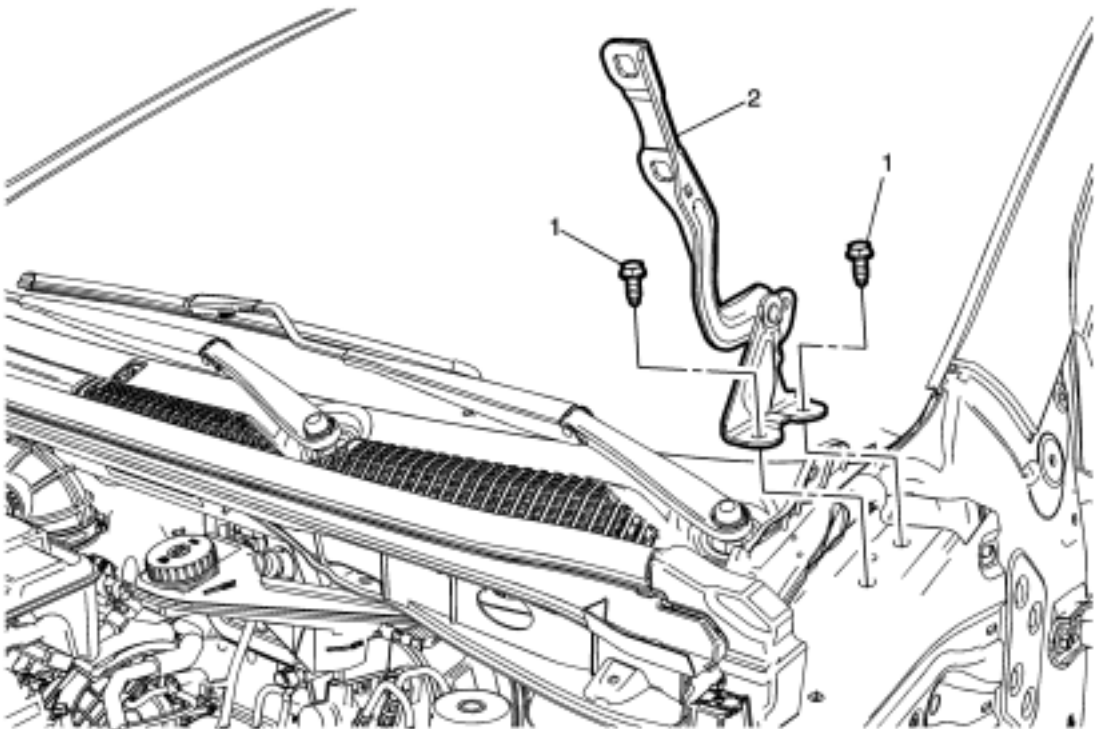

| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <p>1. Remove the hood. Refer to Hood Replacement .</p> <p>2. Remove the front fender. Refer to Front Fender Replacement .</p> | |
| 1 | <p>Hood Hinge Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 22 N·m (16 lbft)</p> |
| 2 | <p>Hood Hinge</p> <p>Procedure</p> <p>Adjust the hood and hinge if needed. Refer to Hood Adjustment .</p> |