


Front Side Door Window Outer Sealing Strip Replacement

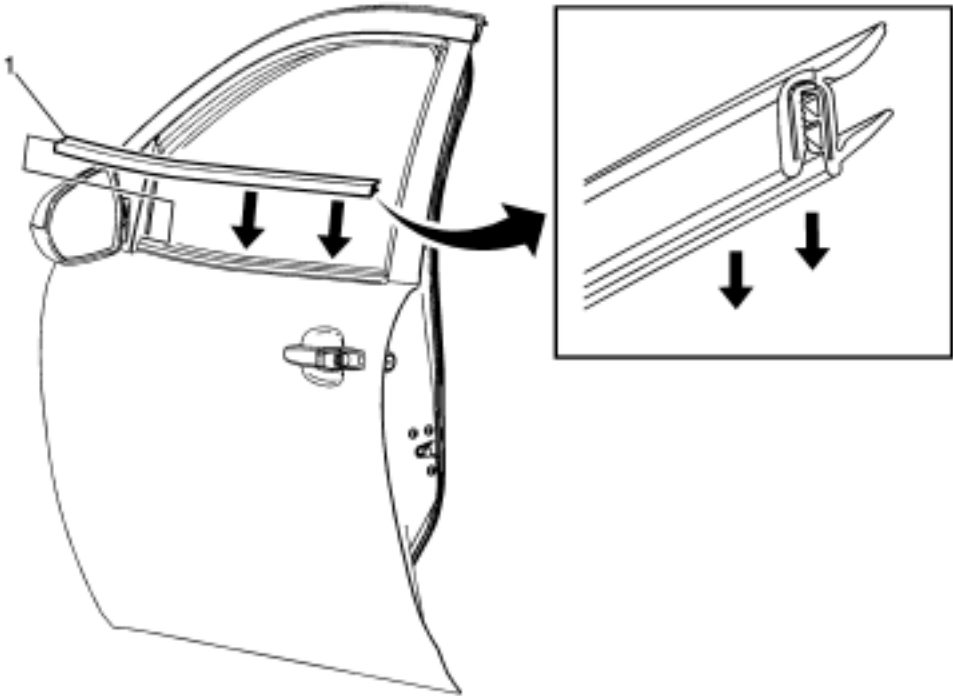

Callout	Component Name
1	<div>Front Side Door Window Outer Sealing Strip</div> <div>Procedure<div><div>1. Do Not remove the outside rearview mirror.</div><div>2. Use the appropriate tool, lift the rear corner of the sealing strip and pull upward and away from the door flange.</div><div>3. Press firmly to insert the front side door window sealing strip back on the door flange.</div><div>4. Inspect the door window for proper operation.</div></div></div>