


Sunroof Actuator Motor Replacement

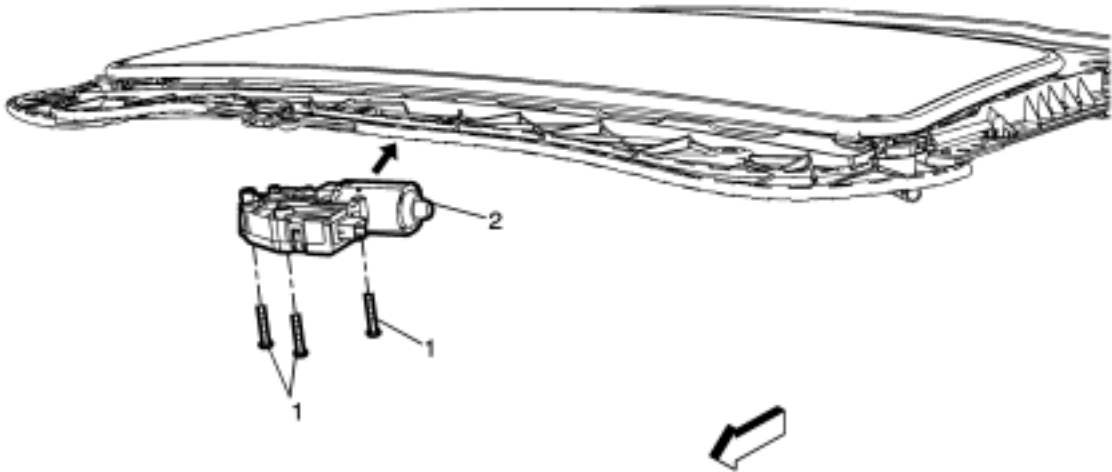

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement .</p>	
1	<p>Sunroof Actuator Motor Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <p>1. The sunroof window must be in the fully closed position before disconnecting the harness, to ensure synchronization of the sunroof motor to the sunroof module.</p> <p>2. Disconnect the electrical connector from the sunroof motor.</p> <p>Tighten 6 N·m (53 lbin)</p>
2	<p>Sunroof Actuator Motor</p> <p>Procedure</p> <p>1. Pull downward to disengage the actuator motor from the sunroof module.</p> <p>2. Install the motor, verify the sunroof operation.</p> <p>3. Ensure the actuator motor initialization/teach process has been done. Refer to Sunroof Motor/Actuator Initialization/Teach Process .</p> <p>4. Verify the proper operation of the sunroof before installing the dome lamp bezel.</p>