


Instrument Panel Outer Air Outlet Duct Replacement

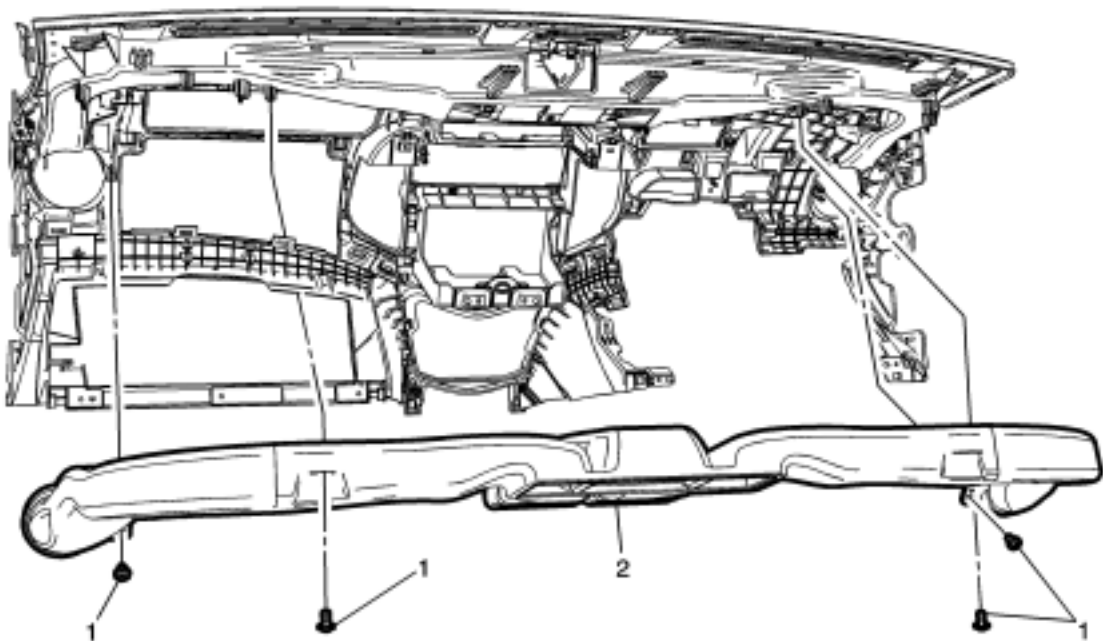

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the instrument panel assembly. Refer to Instrument Panel Assembly Replacement .</p> <p>2. Reposition any wiring or hoses to gain access to air duct.</p>	
1	<p>Center Air Distributor Duct Screw (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p>
2	<p>Center Air Distributor Duct</p>