


Rear Seat Back Cushion Cover and Pad Replacement (AN1 Fixed Bench)

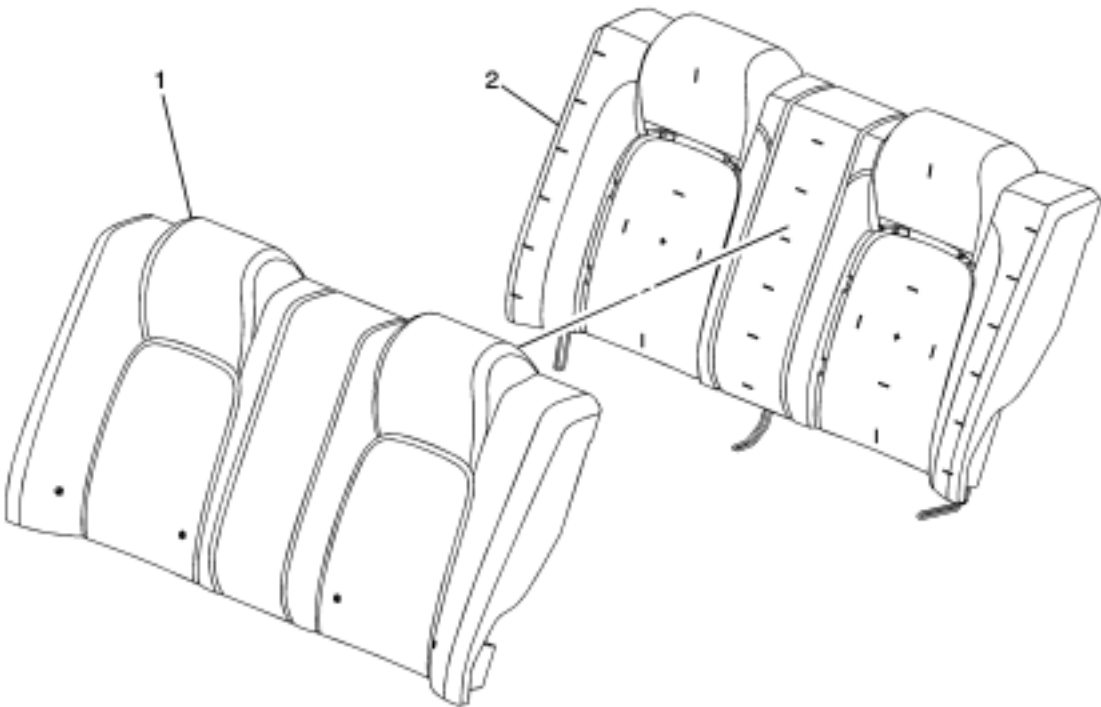

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the rear seat back cushion. Refer to <a href="#">Rear Seat Back Cushion Replacement</a></p>	
1	<p>Rear Seat Back Cushion Cover</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Remove the seat back carpet.</li><li>2. Disengage the J-channel retainers from the seat back cushion frame.</li><li>3. Remove the hog rings from the under side of the rear seat back cushion cover.</li><li>4. Pull the cover away from the pad to disengage the hook and loop retainers.</li><li>5. If replacing the seat back panel, transfer components as necessary.</li></ol> <p><b>Note:</b> When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.</p>
2	<p>Rear Seat Back Cushion Pad</p>