


Rear Side Door Window Replacement (Sedan)

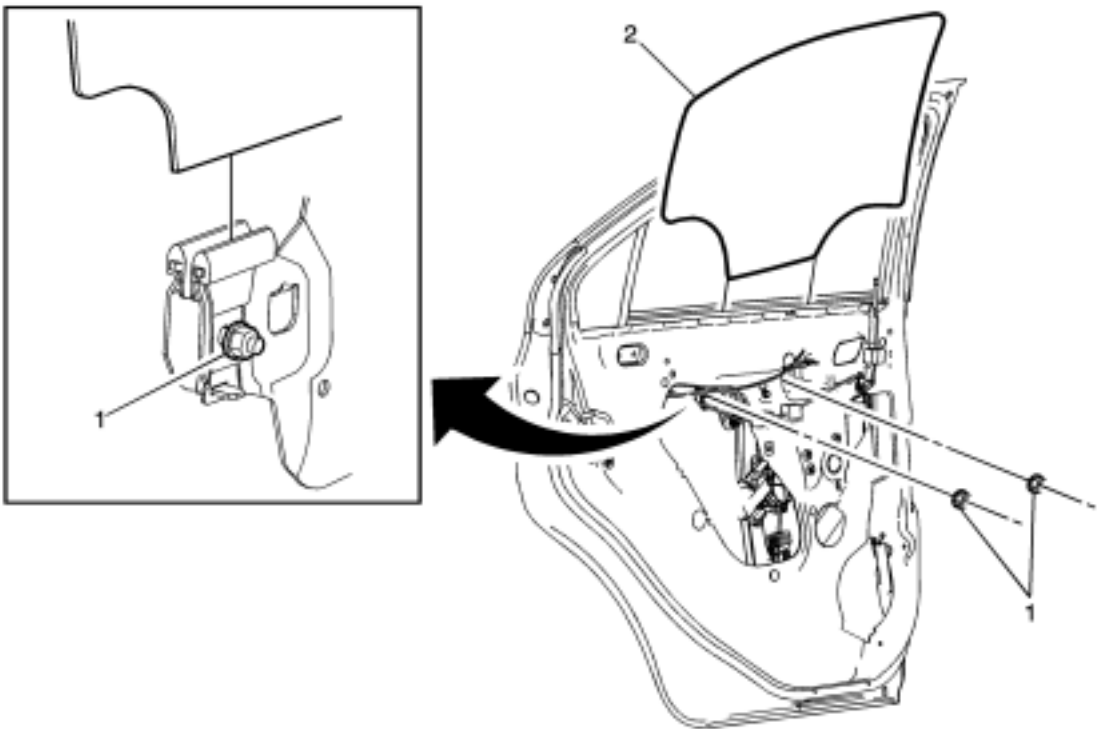

Callout	Component Name
<p><b>Warning:</b> Refer to <a href="#">Glass and Sheet Metal Handling Warning</a> .</p> <p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"><li>1. Remove the rear side door trim panel. Refer to <a href="#">Rear Side Door Trim Replacement</a> .</li><li>2. Remove the rear side door rear guide. Refer to <a href="#">Rear Side Door Window Rear Guide Replacement</a> .</li><li>3. Remove the rear side window outer sealing strip. Refer to <a href="#">Rear Side Door Window Outer Sealing Strip Replacement</a> .</li></ol>	
1	<p>Rear Side Door Window Guide Nut (Qty: 2)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Use masking tape, tape off the outer door frame and applique to prevent scratching.</li><li>2. Remove the rear side door water deflector.</li><li>3. Loosen nuts on the guide so that the window can be removed.</li><li>4. In order to remove the window out of the frame, carefully grasp and tilt the window as you guide the window up and forward.</li></ol> <p><b>Tighten</b> 11 N·m (97 lbin)</p>
2	<p>Rear Side Door Window</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Align the window guide with the access holes in the inner door panel.</li><li>2. Install the window to the guide.</li><li>3. Do not operate the regulator motor without supporting the window. Ensure that the window remains in the guide when operating the regulator motor.</li><li>4. Carefully move the regulator upward for short slow intervals, while ensuring that the window remains in the guide. Tighten the nuts to the window guide.</li><li>5. Inspect the window for proper operation before installing the trim panel.</li></ol>