


Rear Seat Cushion Cover and Pad Replacement

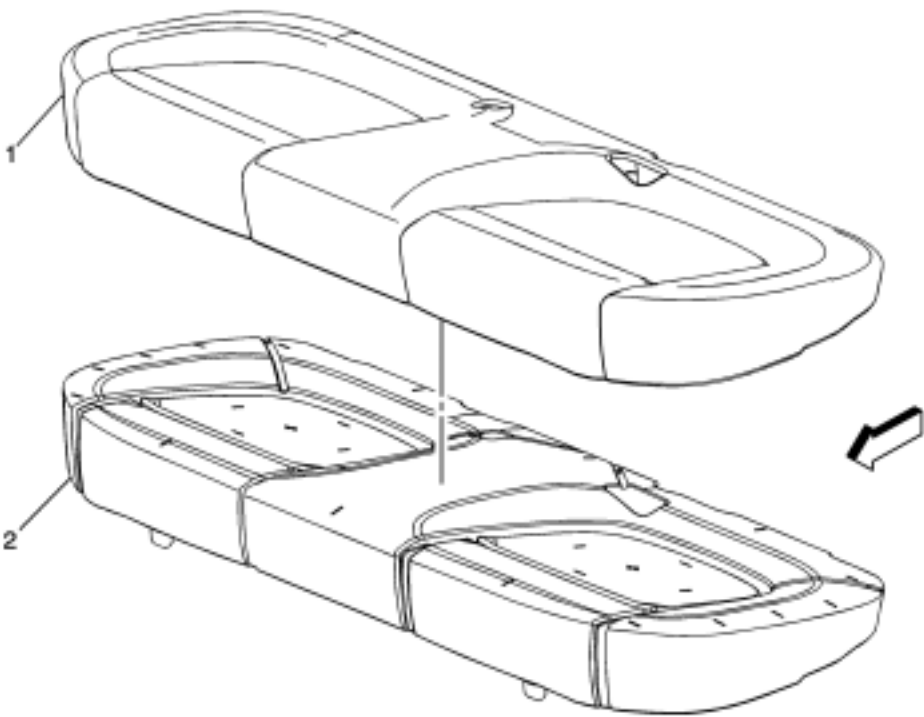

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement</p>	
1	<p>Rear Seat Cushion Cover</p> <p>Procedure</p> <p>1. Remove the hog rings that secure the rear seat cushion cover to the pad.</p> <p>2. Pull the cover away from the pad to disengage any retainers.</p> <p>Note: When installing the rear seat cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.</p>
2	<p>Rear Seat Cushion Pad</p>