


Rear Side Door Upper Front Auxiliary Weatherstrip Retainer Replacement

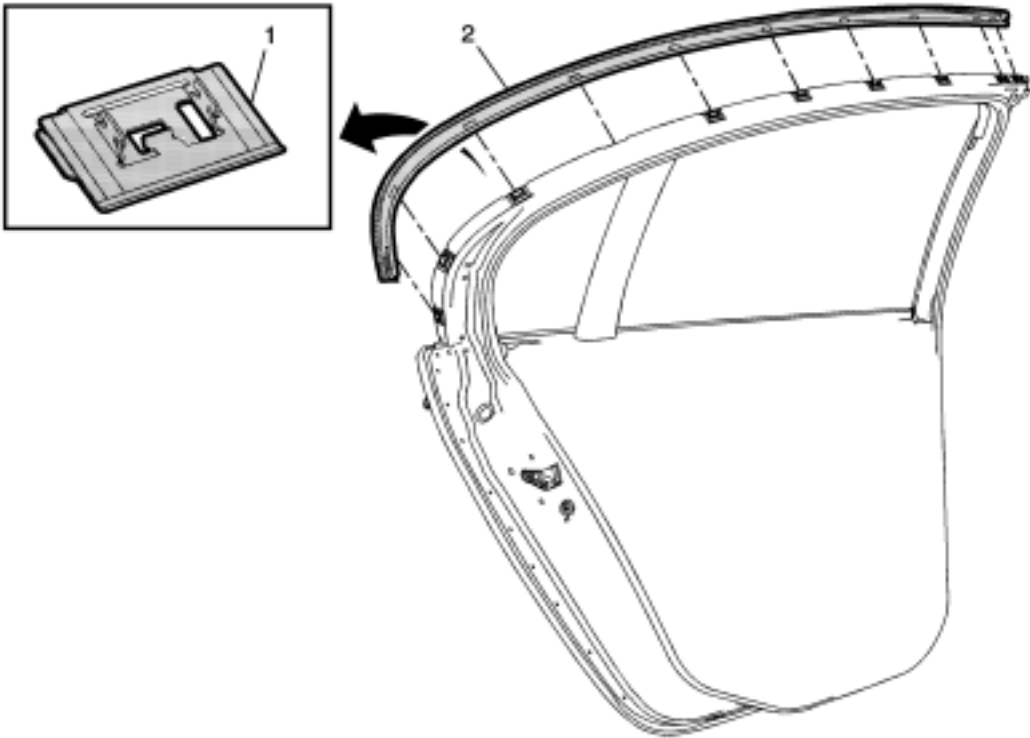

Callout	Component Name
1	Front Side Door Upper Front Auxiliary Weatherstrip Retainer (Qty: 10) Note: If the retainers are damaged when removing they must be replaced.
2	Front Side Door Upper Front Auxiliary Weatherstrip Retainer Preliminary Procedure 1. Rear side door weatherstrip door side. Refer to Rear Side Door Weatherstrip Replacement - Door Side . It is only necessary to remove the upper second of the weatherstrip from the door to replace the weatherstrip retainer. 2. Starting in the center top of the weatherstrip, pull the weatherstrip upward and away from the door retainer. 3. Inspect the door for proper operation and sealing.