


Rear Seat Head Restraint Guide Replacement

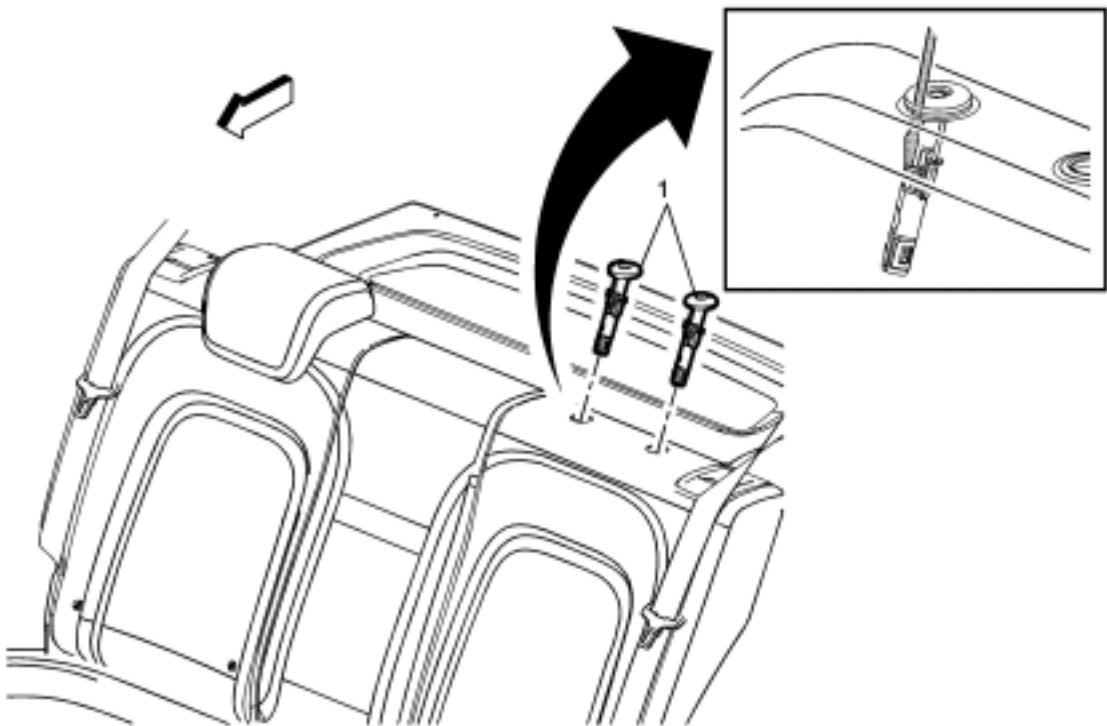

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement</p>	
1	<p>Rear Seat Head Restraint Guide</p> <p>Procedure</p> <p>Using a suitable flat-bladed tool, slide the tool between the cushion and the guide until you find the slot on the outboard side of the guide. Push inward on the guide slot tab , while pulling upward to remove the guide from the seat back frame.</p>