



Front Floor Console Cover Replacement (Manual Transmission)

Removal Procedure

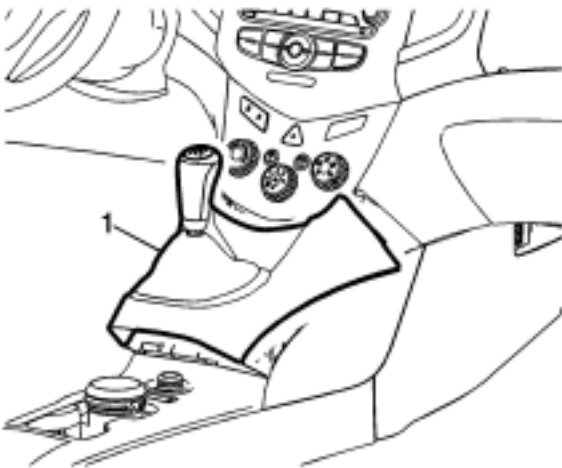

1. Use a flat bladed plastic trim tool in order to release the retainers securing the console cover (1) to the console assembly.

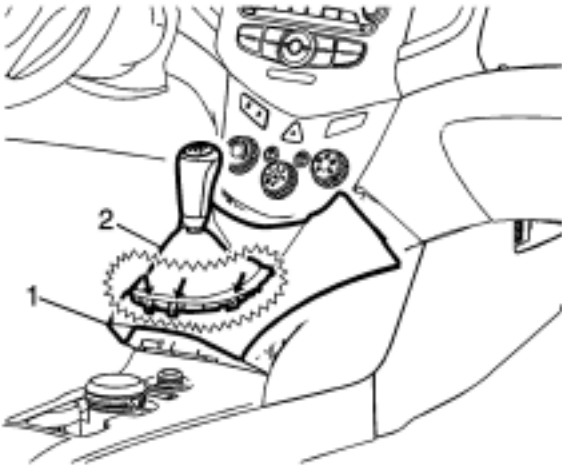

2. Reach under the console cover assembly (1) and release the retainer tabs securing the transmission shift lever boot (2) to the console cover assembly.



3. Feed the transmission control lever boot assembly thru the opening in the console cover assembly (1).
4. Remove the console cover assembly (1) from the vehicle.