


Hood Primary Latch Release Cable Replacement

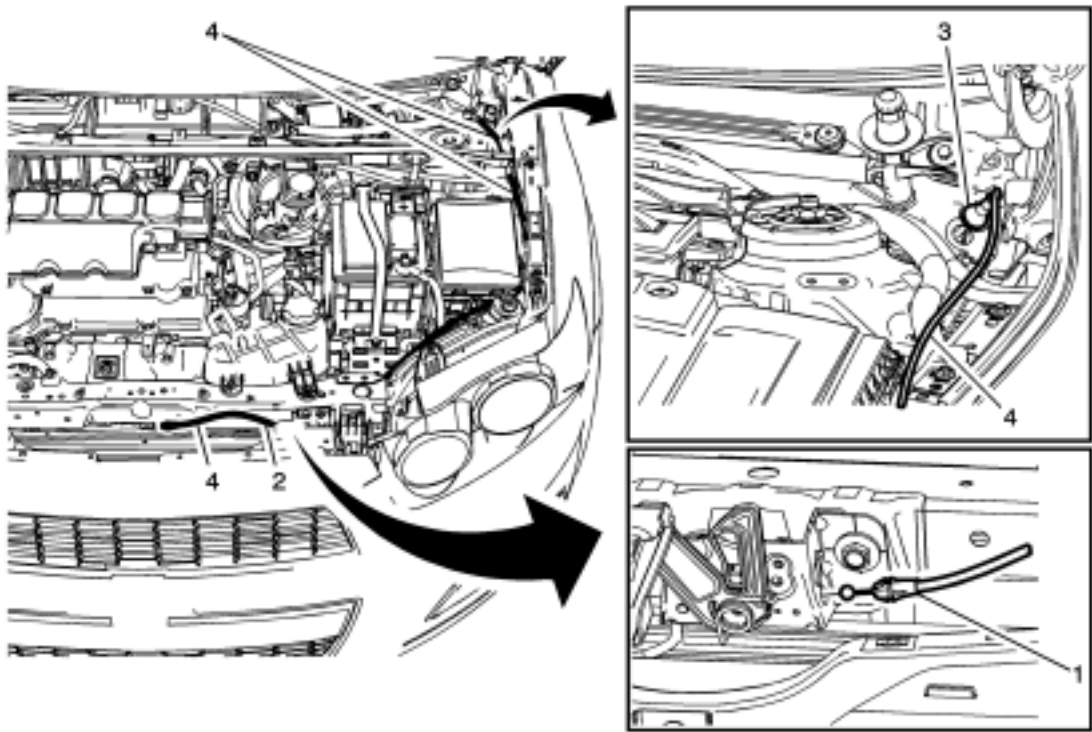

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the radiator opening upper cover. Refer to Radiator Opening Upper Cover Replacement .</p> <p>2. Remove the air inlet grille. Refer to Air Inlet Grille Panel Replacement .</p>	
1	<p>Hood Primary Latch Cable</p> <p>Procedure</p> <p>Disconnect the hood primary latch release cable from the primary hood latch.</p>
2	<p>Hood Primary Latch Release Cable Retainer</p> <p>Procedure</p> <p>Disconnect the hood release cable retainers from the hood release cable.</p>
3	<p>Hood Primary Latch Release Cable Grommet</p>
4	<p>Hood Primary Latch Release Cable</p> <p>Procedure</p> <p>Disconnect the hood primary latch release cable handle from the hood latch cable. Refer to Hood Primary Latch Release Cable Handle Replacement .</p>