


Rear Side Door Latch Replacement

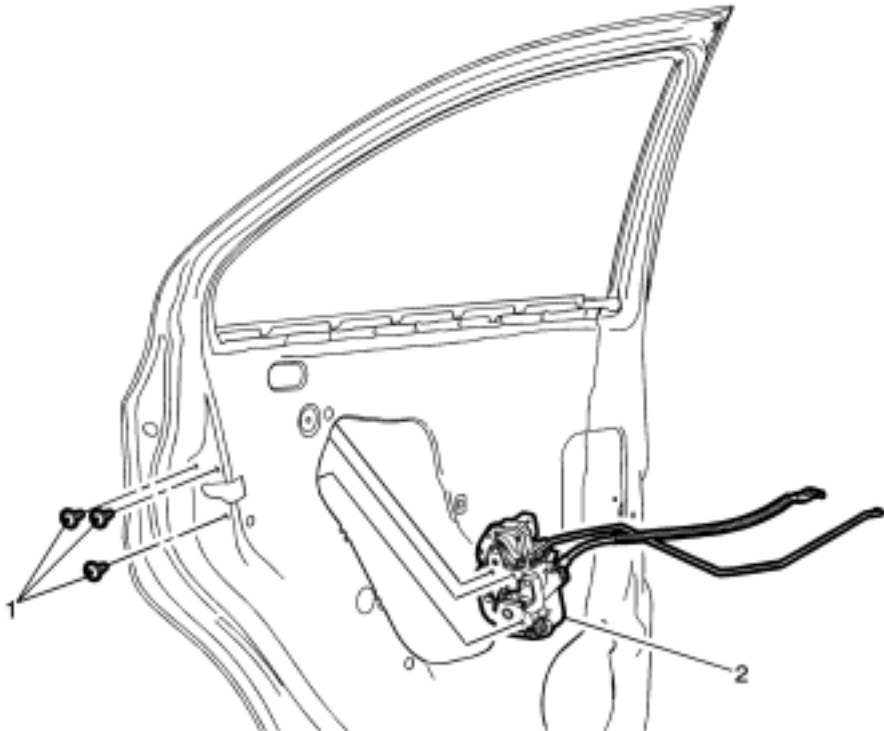

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the rear side door trim panel. Refer to <a href="#">Rear Side Door Trim Replacement</a> .</p>	
1	<p>Rear Side Door Lock Screw (Qty: 3)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Procedures</b></p> <ol style="list-style-type: none"><li>1. Remove the water deflector.</li><li>2. Release the rear inside door handle cable retainers from the door.</li><li>3. Remove the rear side door window rear guide. Refer to <a href="#">Rear Side Door Window Rear Guide Replacement</a> .</li></ol> <p><b>Tighten</b> 10N·m (89lbin)</p>
2	<p>Rear Side Door Lock Assembly</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"><li>1. Disconnect the rear side door lock electrical connector.</li><li>2. Transfer the rear side door lock rods.</li><li>3. Rear outside door handle rod adjustment. Refer to <a href="#">Rear Side Door Outside Handle Rod Adjustment</a> .</li></ol>