


Steering Wheel Airbag Coil Replacement

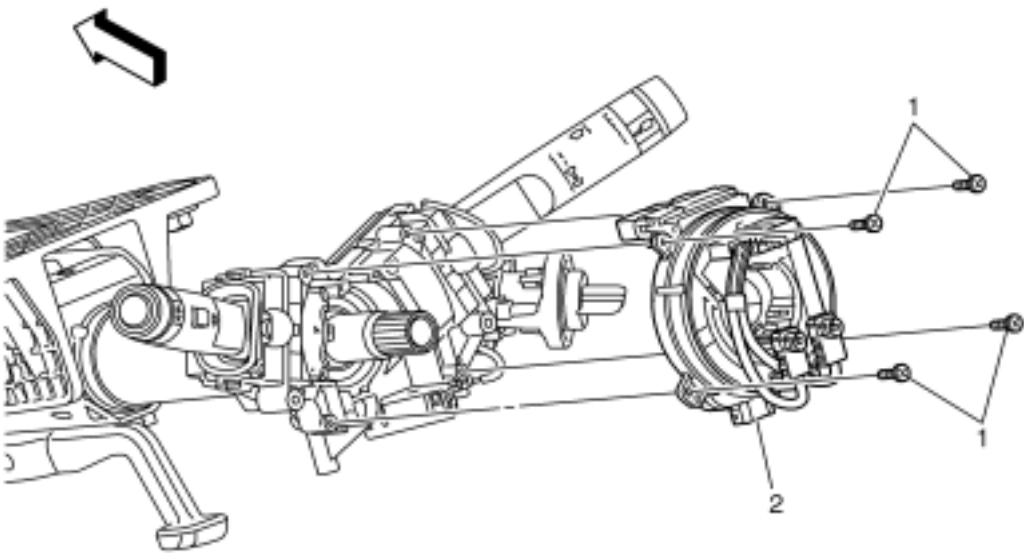

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the steering wheel. Refer to Steering Wheel Replacement .</p> <p>2. Remove the steering column upper trim cover. Refer to Steering Column Upper Trim Cover Replacement .</p> <p>3. Remove the steering column lower trim cover. Refer to Steering Column Lower Trim Cover Replacement .</p>	
1	<p>Steering Wheel Inflatable Restraint Module Coil Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p>
2	<p>Steering Wheel Inflatable Restraint Module Coil</p> <p>Procedure</p> <p>1. Disconnect any electrical connectors as necessary.</p> <p>2. Use tape in order to secure the old coil in the center position.</p> <p>3. Remove the old coil from the steering column.</p> <p>4. Transfer the steering angle sensor. Refer to Steering Angle Sensor Replacement .</p> <p>5. Ensure the coil is centered during installation. If you are installing a NEW coil, ensure the centering tab is on the coil. If the coil is not centered, refer to Inflatable Restraint Steering Wheel Module Coil Centering .</p>