


Sunroof Switch Replacement

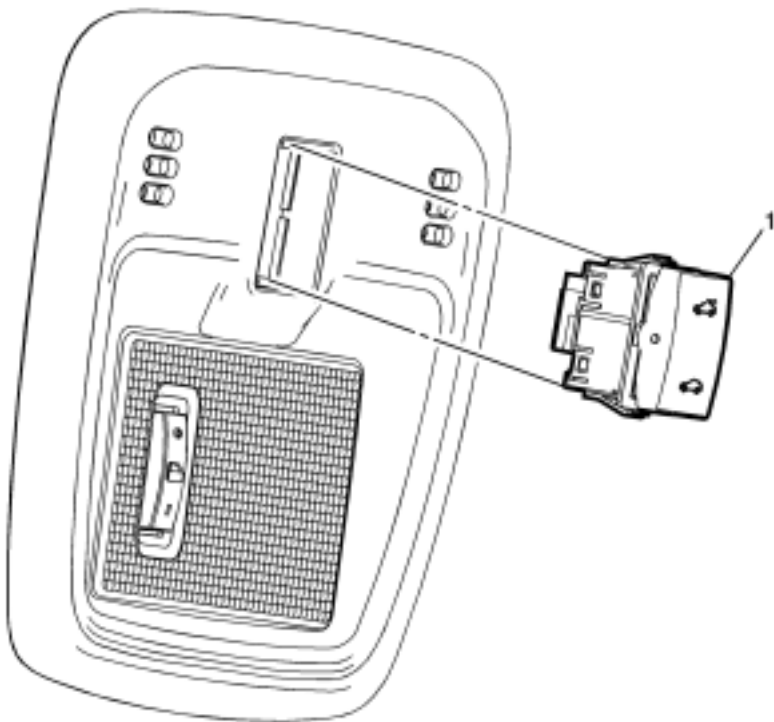

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the dome lamp bezel. Refer to Dome Lamp Bezel Replacement .</p>	
1	<p>Sunroof Switch</p> <p>Procedure</p> <p>1. Disconnect electrical connector. 2. Depress tabs to release switch.</p>