


Windshield Washer Pump Replacement

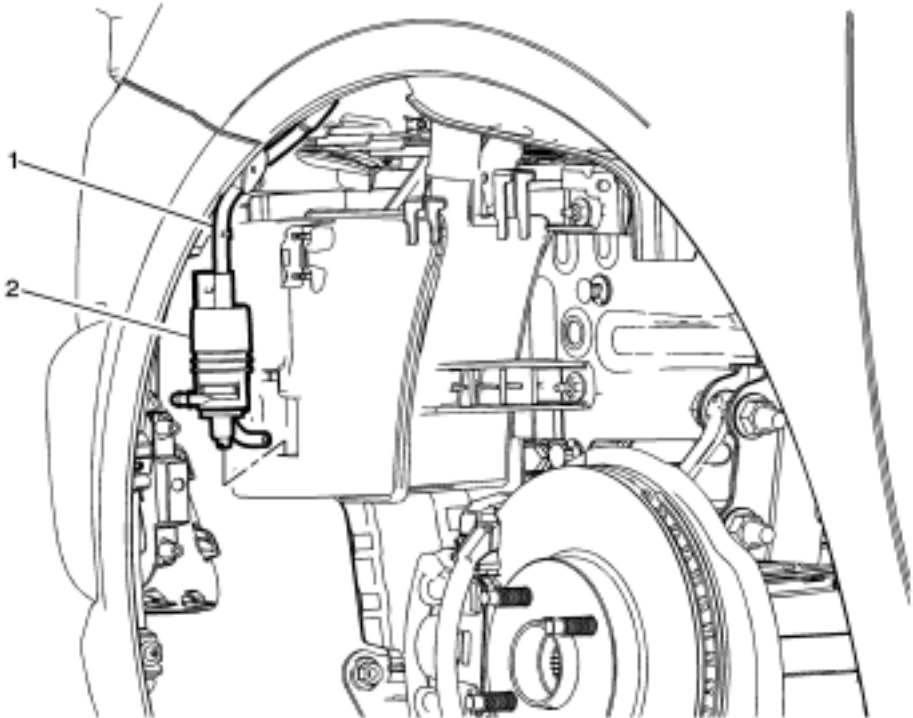

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front left front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .</p>	
1	<p>Windshield Washer Pump Hose</p> <p>Procedure</p> <p>Place a clean suitable drain pan under the windshield washer pump area to recover the windshield washer solvent when the windshield washer pump hose is disconnected.</p>
2	<p>Windshield Washer Pump</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disconnect the electrical connector to the windshield washer pump.2. Using two flat-bladed tools, place the blades on each side of the washer pump, under the windshield washer pump grommet.3. Twist the two flat-blades in opposite directions to lift the washer pump from the windshield washer solvent container.4. Disengage the washer pump from the windshield washer container.5. Remove the windshield washer pump and discard the windshield washer pump grommet.