


Rear Compartment Lid Rear Hinge Replacement

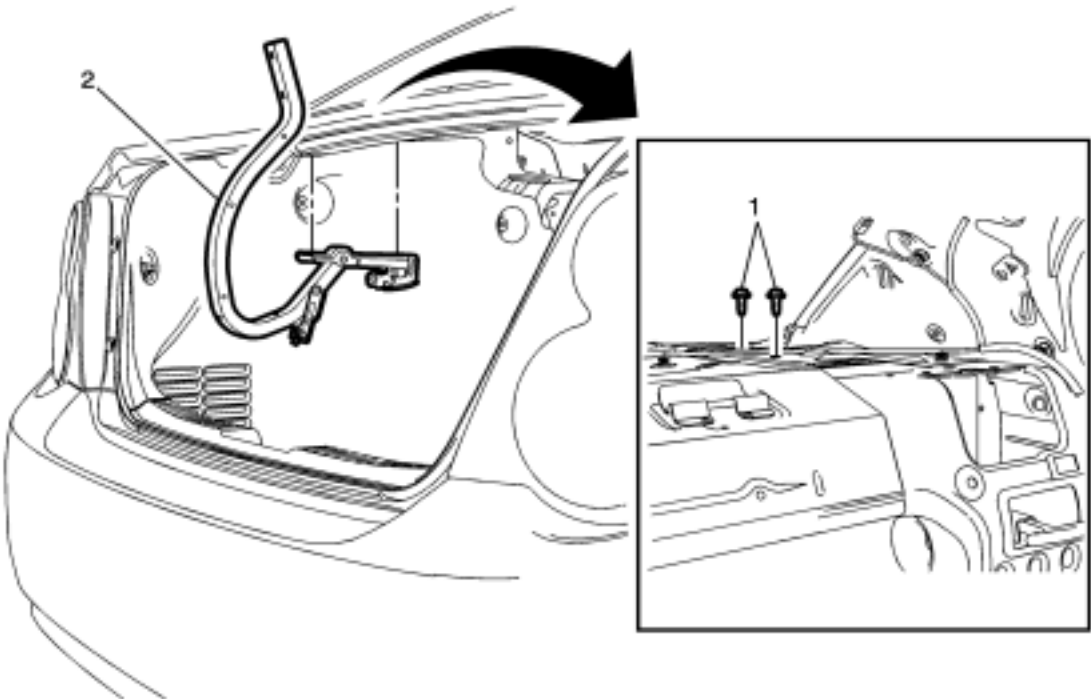

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <p>1. Remove the rear window trim panel. Refer to <a href="#">Rear Window Panel Trim Replacement</a> .</p> <p>2. Remove the rear compartment lid. Refer to <a href="#">Rear Compartment Lid Replacement</a> .</p> <p>3. Disconnect the rear compartment lid hinge torque rods. Refer to <a href="#">Rear Compartment Lid Hinge Torque Rod Replacement</a> .</p>	
1	<p>Rear Compartment Lid Rear Hinge Bolt (Qty: 2)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Tighten</b> 9N·m (80lbin)</p>
2	<p>Rear Compartment Lid Rear Hinge</p> <p><b>Procedures</b></p> <p>1. Transfer parts as needed.</p> <p>2. Adjust the rear compartment lid if needed. Refer to <a href="#">Rear Compartment Lid Adjustment</a> .</p>