


Windshield Wiper Motor Replacement

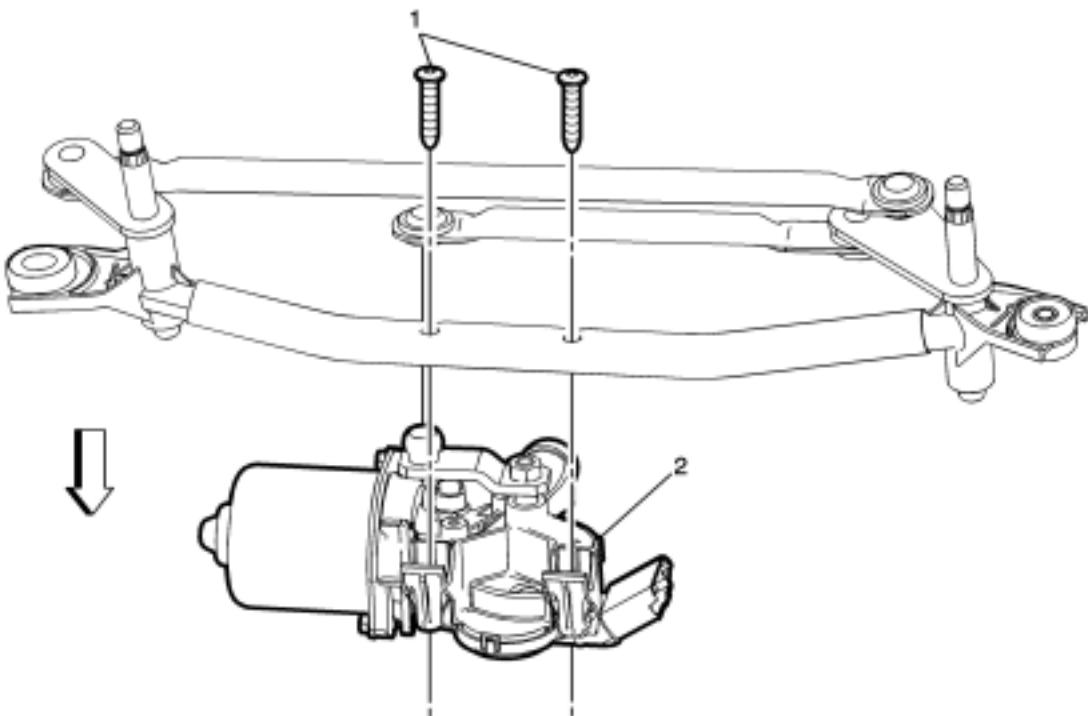

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the wiper system module. Refer to Windshield Wiper System Module Replacement</p>	
1	<p>Windshield Wiper Motor Bracket Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 8.5 N·m (75 lbin)</p>
2	<p>Windshield Wiper Motor</p> <p>Procedure</p> <p>1. Use a wiper linkage separator or similar tool, separate the transmission drive link from the wiper motor crank arm ball stud.</p> <p>2. Use a wiper linkage installer or similar tool, install the transmission drive link onto the wiper motor crank arm ball stud.</p> <p>Tip Apply a small amount of grease to the inner cup on the transmission link to aid in installation.</p>