


Rear Side Door Window Weatherstrip Replacement (Sedan)

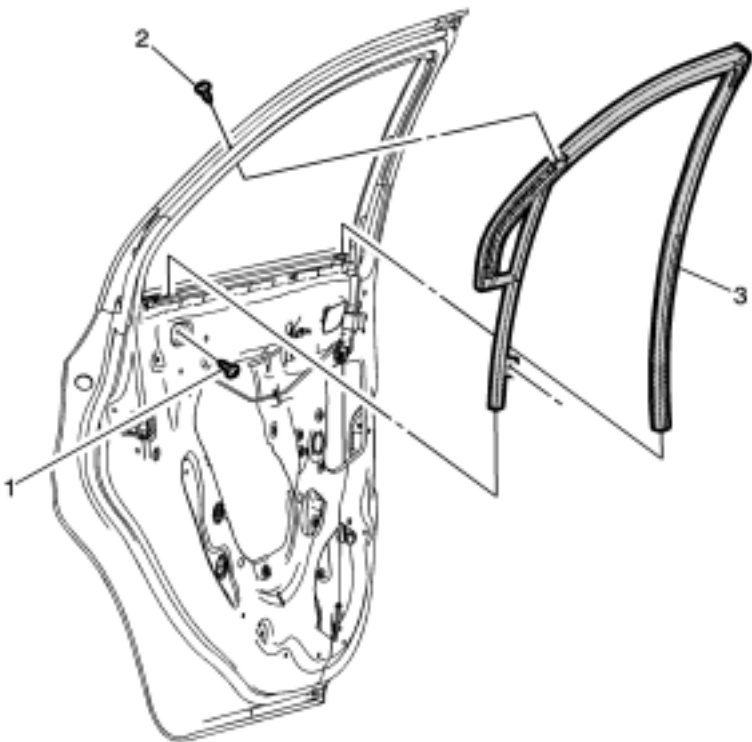

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. The rear door side window weatherstrip and window is serviced as one assembly. Refer to Rear Side Door Stationary Window Replacement .</p> <p>2. Remove the rear side door window . Refer to Rear Side Door Window Replacement .</p>	
1	<p>Rear Side Door Window Weatherstrip Lower Bolt</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <p>Remove the rear side door water deflector.</p> <p>Tighten 9 N·m (80 lbin)</p>
2	<p>Rear Side Door Window Weatherstrip Upper Screw</p> <p>Procedure</p> <p>1. Pull the door weatherstrip out of the upper retainer to expose the screw. 2. Remove the weatherstrip from the front and rear lower guides. 3. Grasp both upper corners, pull downward releasing the weatherstrip from the door frame.</p> <p>Tighten 3 N·m (27 lbin)</p>
3	<p>Rear Side Door Window Weatherstrip</p> <p>Procedure</p> <p>1. Insert the weatherstrip downward in the guide until fully seated. 2. Carefully move the regulator upward for short slow intervals, while ensuring that the window remains in the guides.</p> <p>3. Inspect the door window for proper operation before installing the door trim panel.</p>