


Backup Lamp Bulb Replacement (Sedan)

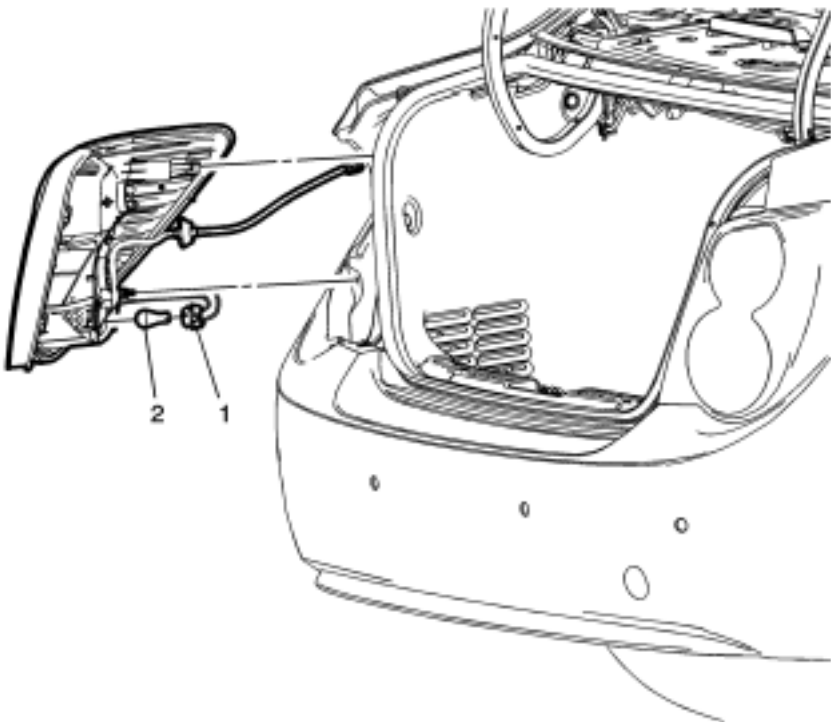

Callout	Component Name
<b>Preliminary Procedure</b> Remove the tail lamp assembly. Refer to <a href="#">Tail Lamp Replacement</a> .	
1	<div>Back Up Lamp Bulb Socket</div> <div><b>Procedure</b> Rotate the back up lamp bulb socket counter-clockwise and remove from the tail lamp housing.</div>
2	<div>Back Up Lamp Bulb</div> <div><b>Procedure</b> Push inward while rotating counter-clockwise on the bulb and remove from the lamp socket.</div>