


Floor Panel Carpet Replacement

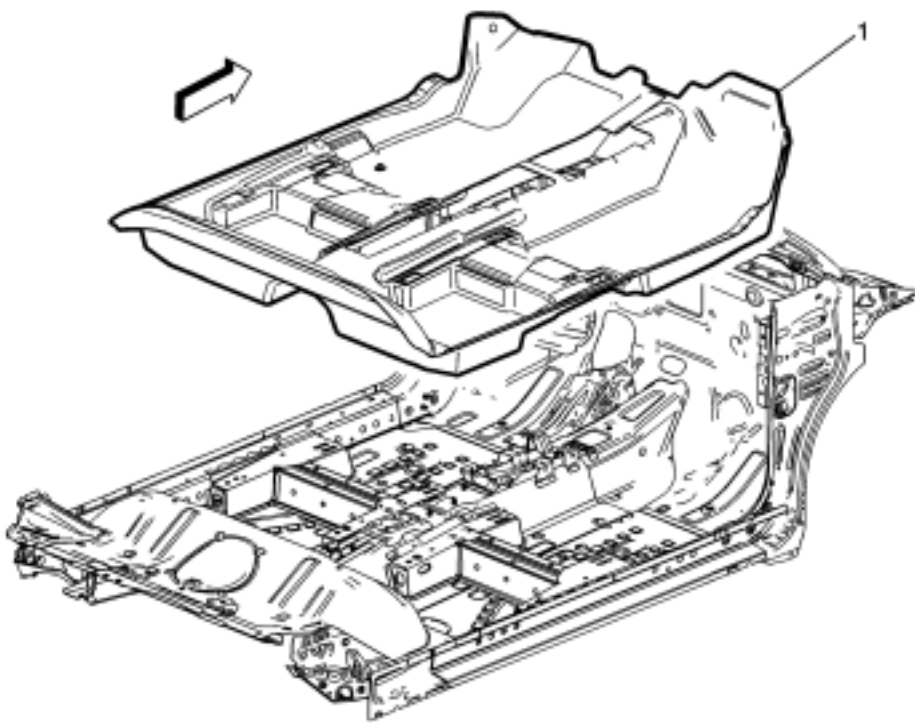

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove front seats. Refer to Driver or Passenger Seat Replacement .</p> <p>2. Remove rear seat cushion. Refer to Rear Seat Cushion Replacement .</p> <p>3. Remove the front floor console. Refer to Front Floor Console Replacement .</p> <p>4. Remove the front side door opening floor carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement .</p> <p>5. Remove the rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement .</p> <p>6. Remove the center pillar lower trim panels. Refer to Center Pillar Lower Trim Panel Replacement .</p>	
1	Front Floor Panel Carpet Assembly