


Instrument Panel Upper Trim Panel Replacement - Right Side (Without AR1)

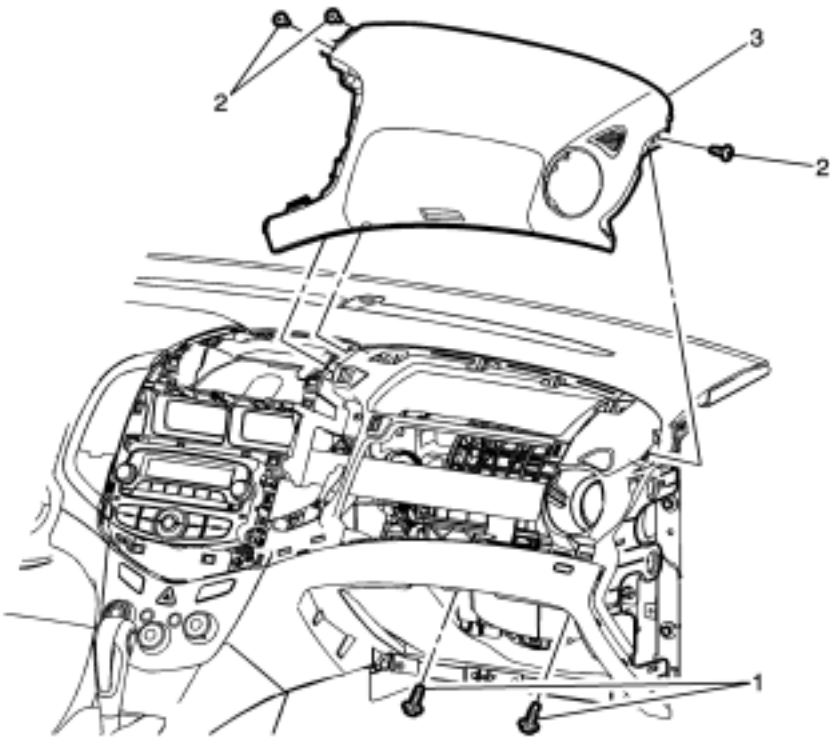

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Disable the SIR system. Refer to SIR Disabling and Enabling .</p> <p>2. Remove the instrument panel center molding. Refer to Instrument Panel Center Molding Replacement .</p> <p>3. Remove the instrument panel center upper molding. Refer to Instrument Panel Upper Trim Panel Replacement - Left Side .</p> <p>4. Remove the instrument panel lower compartment. Refer to Instrument Panel Lower Compartment Replacement .</p> <p>5. Remove the right instrument panel accessory upper trim plate. Refer to Instrument Panel Accessory Upper Trim Plate Replacement .</p> <p>6. Remove the right instrument panel outer trim cover. Refer to Instrument Panel Outer Trim Cover Replacement .</p> <p>7. Remove the right instrument panel outer air outlet. Refer to Instrument Panel Outer Air Outlet Replacement - Right Side .</p>	
1	<p>Instrument Panel Inflatable Restraint Module Fasteners (Qty: 2)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 10N·m89lbin</p>
2	<p>Instrument Panel Upper Trim Panel Fastener (Qty: 3)</p>
3	<p>Instrument Panel Upper Trim Panel</p> <p>Procedures</p> <p>1. Use a flat bladed plastic trim tool in order to disengage the retainers securing the upper trim panel to the instrument panel assembly.</p> <p>2. Disconnect the electrical connections.</p> <p>3. When replacing the instrument panel upper trim panel, transfer all necessary components.</p>