


Rear Side Door Window Regulator Replacement (Hatchback)

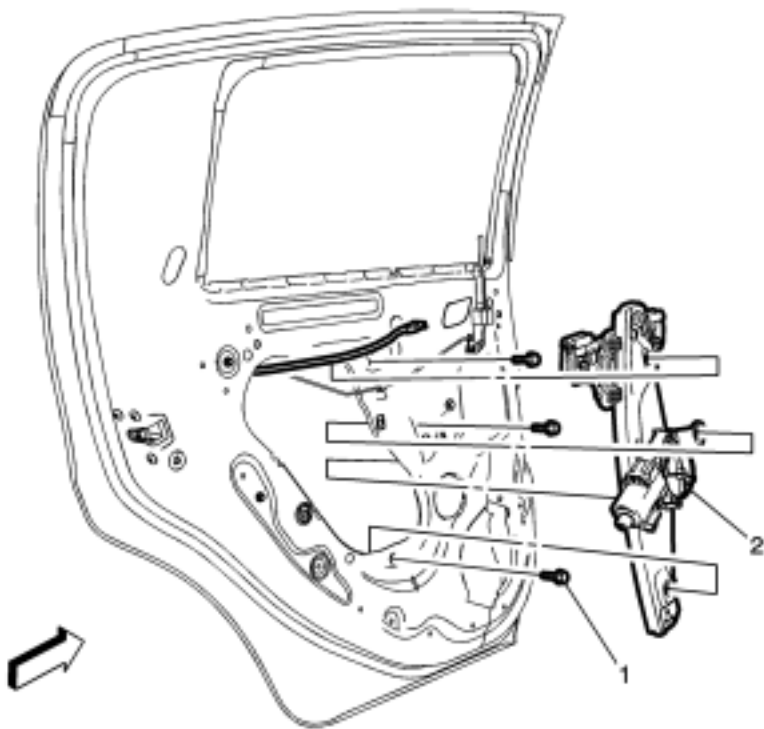

Callout	Component Name
<p>Warning: Refer to Glass and Sheet Metal Handling Warning .</p> <p>Preliminary Procedure</p> <p>Remove the front side door window from the guide. Do not remove the window from the vehicle, raise the window to the fully up position, tape in place. Refer to Rear Side Door Window Replacement .</p>	
1	<p>Rear Side Door Window Regulator Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <p>1. Remove the rear side door water deflector. 2. Loosen the window guide nuts. Do not remove the nuts from the guide. 3. Disconnect the door electrical connector. 4. Remove the rear side door window from the guide. Refer to Rear Side Door Window Rear Guide Replacement . Do not remove the window from the vehicle, raise the window to the fully up position, tape in place.</p> <p>Tighten 11 N·m (97 lbin)</p>
2	<p>Rear Side Door Window Regulator</p> <p>Procedure</p> <p>1. Transfer the rear side door window regulator motor. Refer to Rear Side Door Window Regulator Motor Replacement . 2. Inspect the door window for proper operation before installing the door trim panel.</p>