



## Air Conditioning Compressor and Condenser Hose Replacement (1.6L or 1.8L)

### Removal Procedure


1. Recover the refrigerant. Refer to [Refrigerant Recovery and Recharging](#) .
2. Disconnect the A/C refrigerant pressure sensor electrical connector.

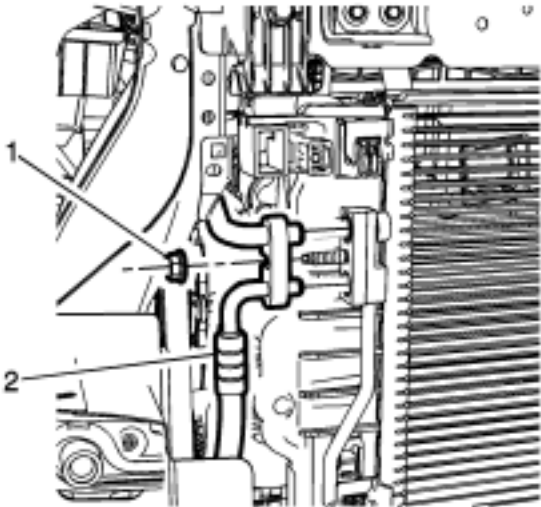

3. Remove air conditioning compressor and condenser hose nut (1).
4. Remove air conditioning compressor and condenser hose (2) from A/C condenser.

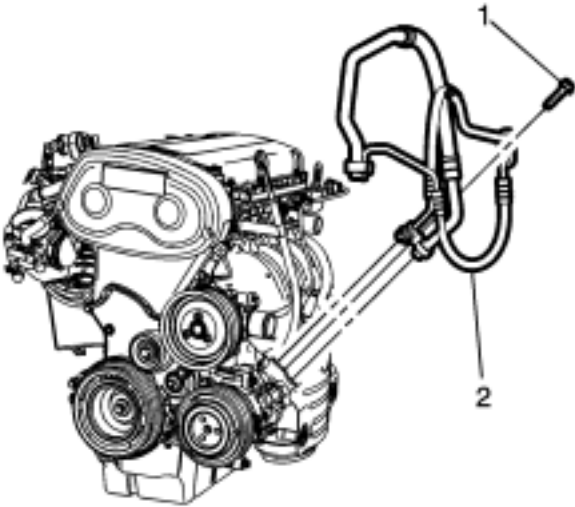

5. Remove A/C compressor and condenser hose bolt (1).
6. Remove A/C compressor and condenser hose (2) from A/C compressor.

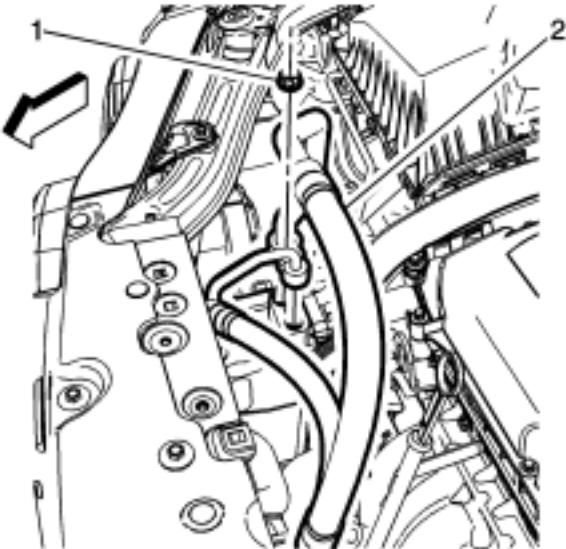

7. Remove air conditioning compressor and condenser hose nut (1).
8. Remove air conditioning compressor and condenser hose (2) from refrigerant hose.
9. Remove air conditioning compressor and condenser hose from the vehicle.