


Front Seat Belt Anchor Plate Tensioner Cover Replacement (4 Way)

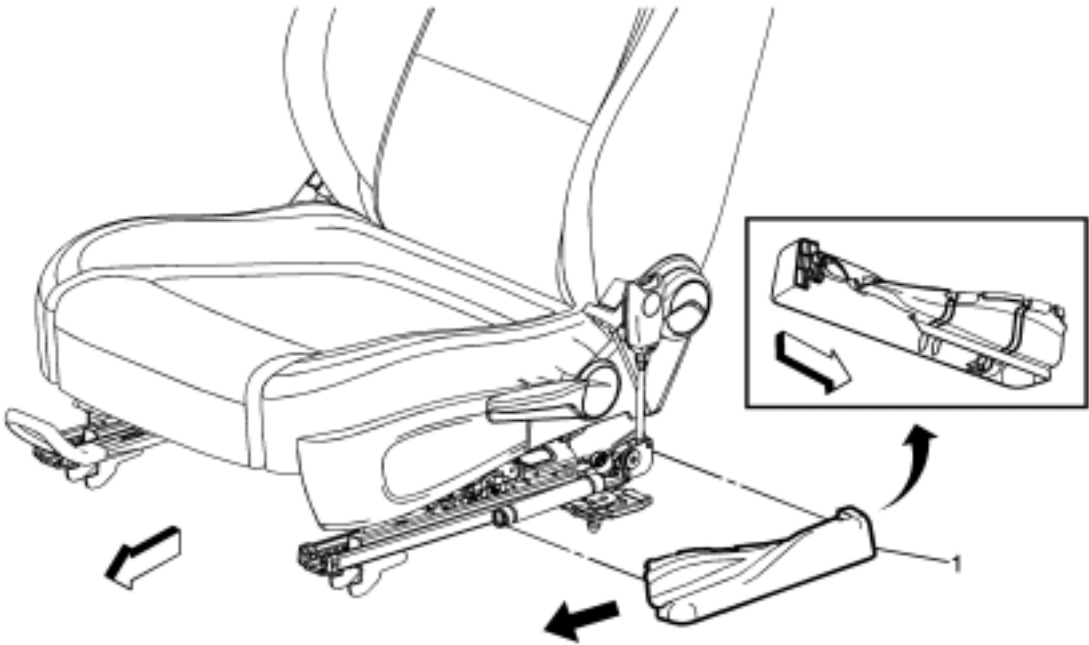

Callout	Component Name
1	<div>Driver or Passenger Seat Belt Tensioner Cover</div> <div><b>Procedure</b></div> <div>Remove the tensioner cover by pushing downward on the rear and center of the cover. Then applying light pressure to the front of the cover, push the cover rearward to remove it from the seat frame.</div>