


Quarter Inner Trim Finish Panel Replacement (Hatchback)

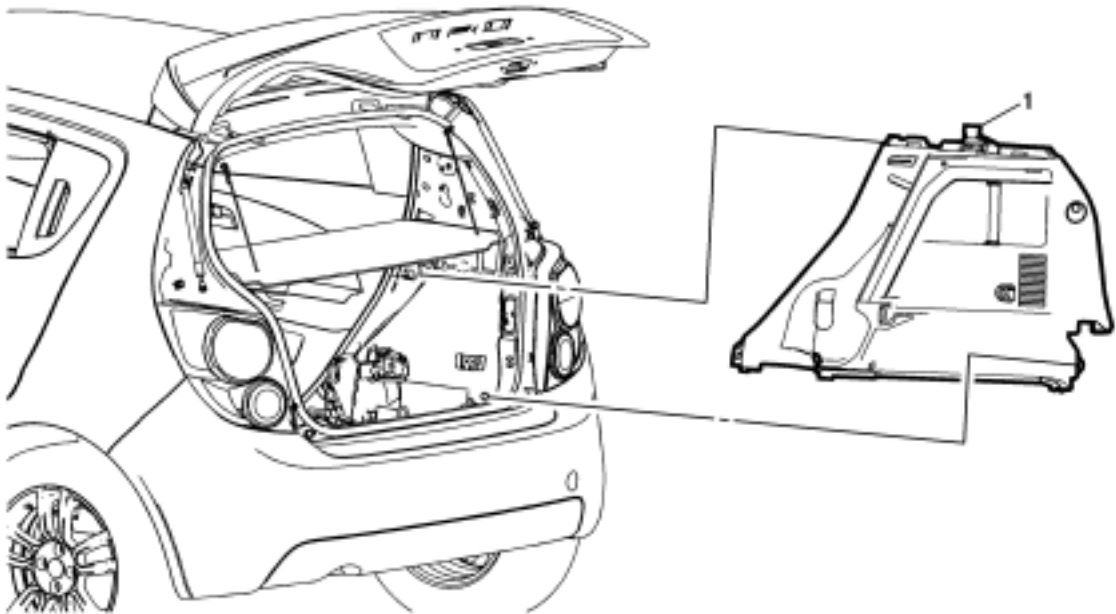

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the rear side door opening floor carpet retainer. Refer to Rear Side Door Opening Floor Carpet Retainer Replacement .</p> <p>2. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement .</p> <p>3. Remove rear seat back. Refer to Rear Seat Back Cushion Replacement .</p> <p>4. Remove the body lock pillar upper trim panel. Refer to Body Lock Pillar Upper Trim Panel Replacement .</p> <p>5. Remove the rear compartment stowage shelf. Refer to Rear Compartment Stowage Shelf Replacement .</p> <p>6. Remove the rear compartment sill trim plate . Refer to Rear Compartment Sill Trim Plate Replacement .</p> <p>7. Remove the rear shoulder belt. Refer to Shoulder Belt Replacement - Rear .</p>	
1	<p>Quarter Inner Trim Finish Panel Assembly</p> <p>Procedure</p> <p>Use a trim tool or equivalent to aid in removal.</p> <p>Note: After installation of the quarter inner trim panel, ensure the rear seat belt is not trapped under the trim panel. Pull up on the belt to verify full movement of the belt.</p>