


Heater and Air Conditioning Evaporator and Blower Module Replacement

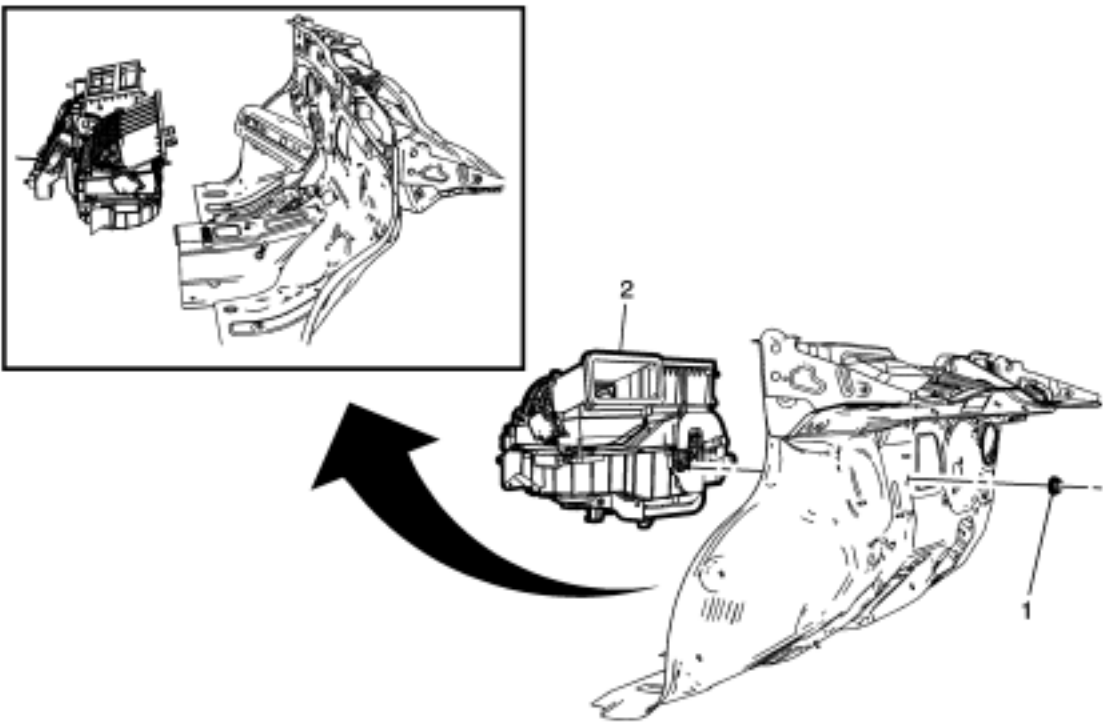

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Recover the refrigerant. Refer to Refrigerant Recovery and Recharging .</p> <p>2. Drain the cooling system. Refer to Cooling System Draining and Filling .</p> <p>3. Remove the instrument panel tie bar. Refer to Instrument Panel Tie Bar Replacement .</p> <p>4. Disconnect the HVAC module electrical connectors.</p> <p>5. Remove the air conditioning evaporator hose assembly from the thermal expansion valve. Refer to Air Conditioning Evaporator Hose Assembly Replacement .</p> <p>6. Remove the heater outlet hose. Refer to Heater Outlet Hose Replacement .</p> <p>7. Remove the heater inlet hose. Refer to Heater Inlet Hose Replacement .</p>	
1	<p>Heater and Air Conditioning Evaporator and Blower Module Fastener</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 22 N·m (16 lbft)</p>
2	<p>Heater and Air Conditioning Evaporator and Blower Module Assembly</p>