


Installation Procedure


Note: Use NEW O-ring seals. Refer to [Air Conditioning O-Ring Seal Replacement](#) .

1. Install air conditioning compressor and condenser hose.


Caution: Refer to [Fastener Caution](#) .

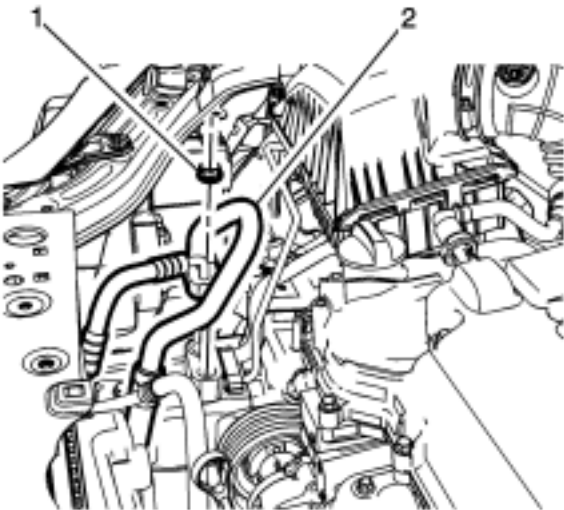

2. Install air conditioning compressor and condenser hose (2) to the refrigerant hose.
3. Install air conditioning compressor and condenser hose nut (1). Tighten nut to **22 N·m (16 lb ft)**.

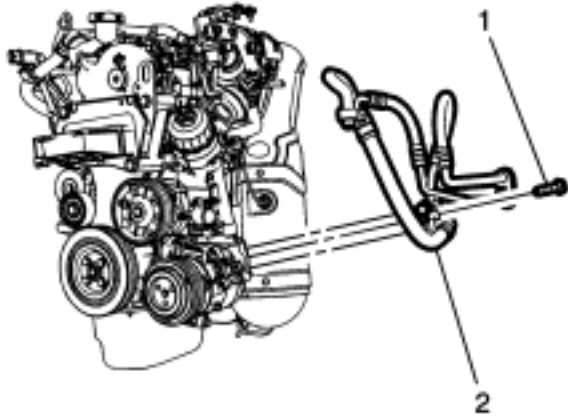

4. Install air conditioning compressor and condenser hose (2) to the A/C compressor.
5. Install air conditioning compressor and condenser hose bolt (1). Tighten bolt to **22 N·m (16 lb ft)**.

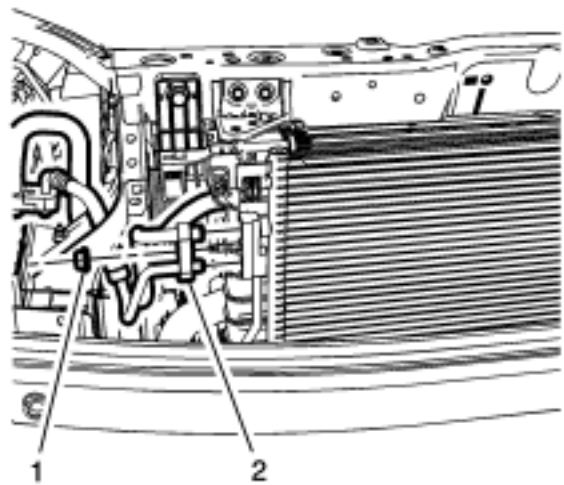

6. Install air conditioning compressor and condenser hose (2) to the A/C condenser .
7. Install air conditioning compressor and condenser hose nut (1). Tighten nut to **22 N·m (16 lb ft)**.
8. Install front bumper fascia. Refer to [Front Bumper Fascia Replacement](#) .
9. Evacuate and charge the refrigerant system. Refer to [Refrigerant Recovery and Recharging](#) .