


Air Conditioning Compressor Replacement (1.6L or 1.8L)

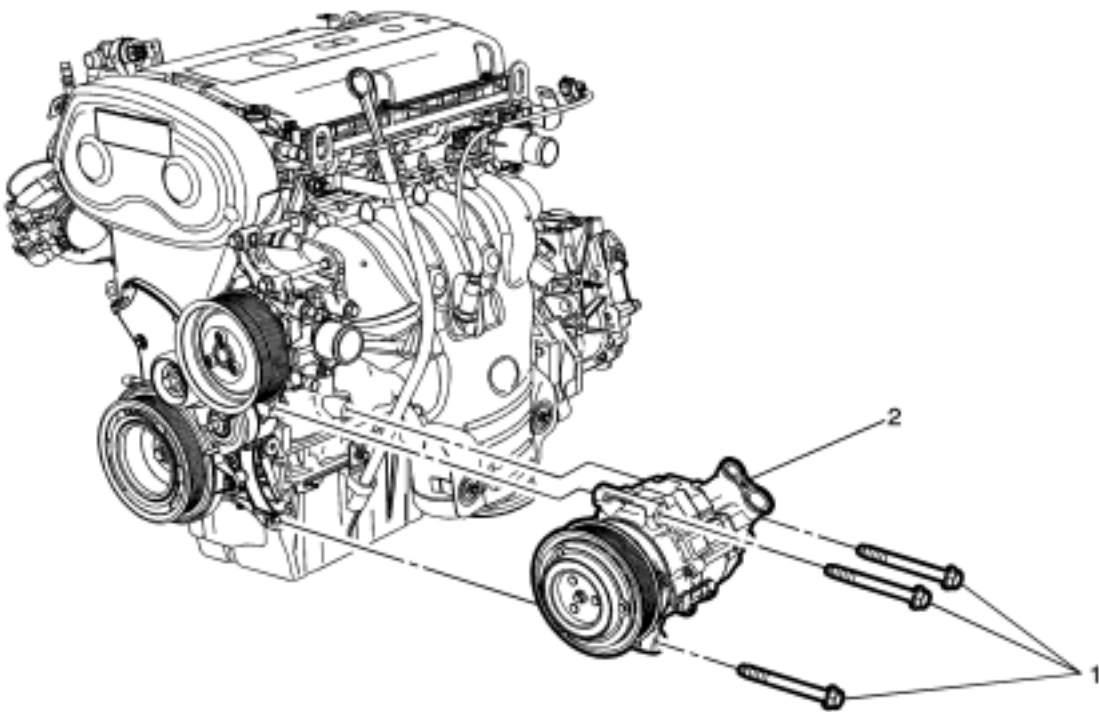

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Recover the refrigerant. Refer to <a href="#">Refrigerant Recovery and Recharging</a> .</p> <p>2. Raise and support the vehicle. Refer to <a href="#">Lifting and Jacking the Vehicle</a> .</p> <p>3. Remove the drive belt. Refer to <a href="#">Drive Belt Replacement</a> .</p> <p>4. Remove the air conditioning compressor and condenser hose. Refer to <a href="#">Air Conditioning Compressor and Condenser Hose Replacement</a> .</p> <p>5. Disconnect the electrical connector.</p>	
1	<p>Air Conditioning Compressor Bolts (Qty:3)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> .</p> <p><b>Tighten</b> 22N·m (16lbft)</p>
2	<p>Air Conditioning Compressor</p> <p><b>Procedure</b></p> <p>When replacing the A/C compressor, balance the compressor oil. Refer to <a href="#">Air Conditioning Compressor Oil Balancing</a> .</p>