


Rear Side Door Lock Cylinder Opening Cover Replacement

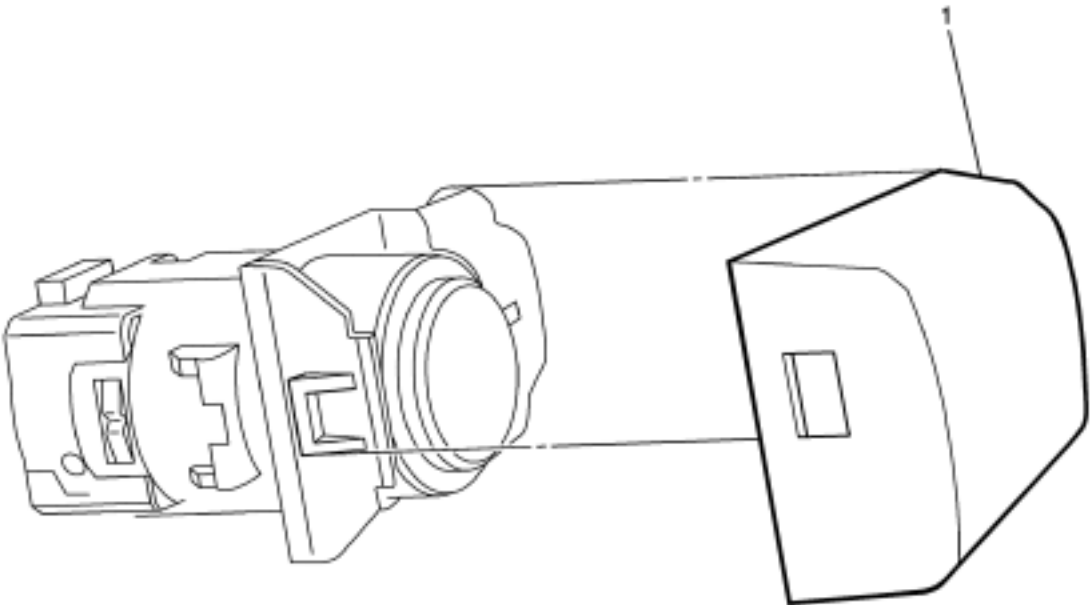

Callout	Component Name
1	<p>Rear Side Door Lock Cylinder Opening Cover</p> <p>Procedure</p> <p>1. Remove the rear side door lock cylinder, Do Not remove the outside door handle. Refer to Rear Door Lock Cylinder Replacement .</p> <p>2. Do Not remove the lock cylinder screw completely from the housing. Unscrew the screw to a hard stop, remove the cylinder.</p> <p>Tip</p> <p>Use a small flat-bladed tool to release the lock cylinder bezel retainers location on both sides.</p>