


Front Side Door Outside Handle Bracket Replacement

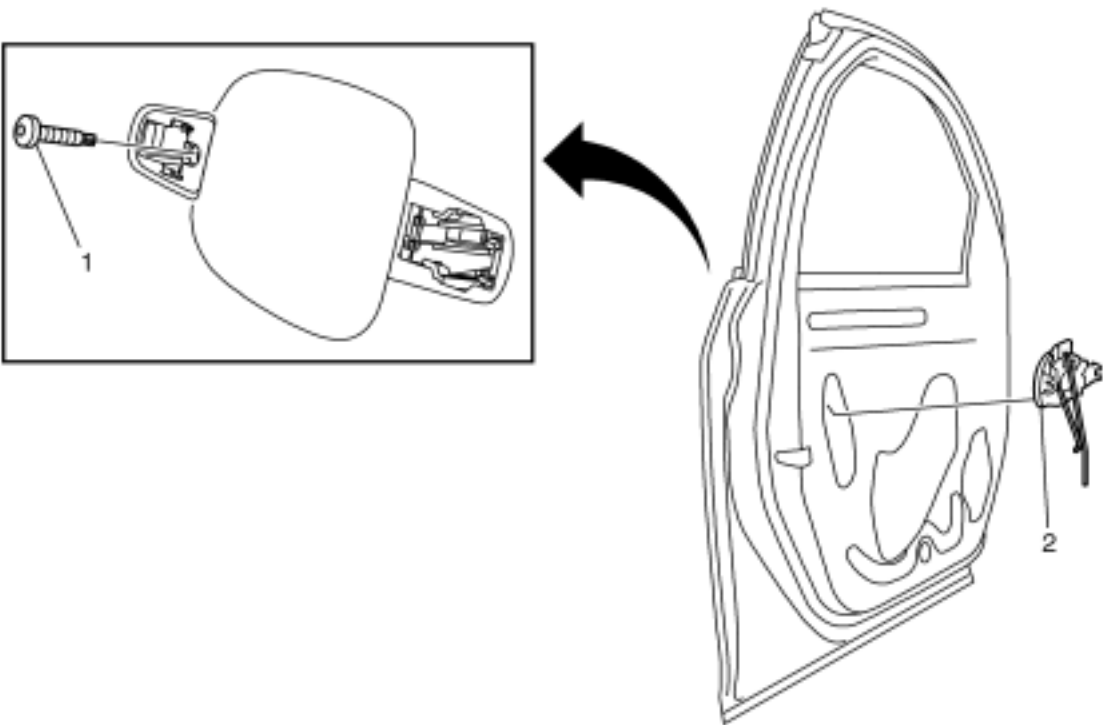

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the front side door trim panel. Refer to Front Side Door Trim Replacement .</p> <p>2. Remove the front side door outside handle. Refer to Front Side Door Outside Handle Replacement .</p>	
1	<p>Front Side Door Outside Handle Bracket Screw</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <p>Remove the front side door water deflector.</p> <p>Tighten 5 N·m (44 lbin)</p>
2	<p>Front Side Door Outside Handle Bracket</p> <p>Procedure</p> <p>1. Release front side door outside handle rod mechanism at shift linkage lever – clip.</p> <p>2. Release the front side door latch cylinder rod from the door latch.</p> <p>3. Transfer components as necessary.</p> <p>4. Inspect the door latch system for proper operation before installing the door trim panel.</p>