


Front Side Door Weatherstrip Replacement - Body Side

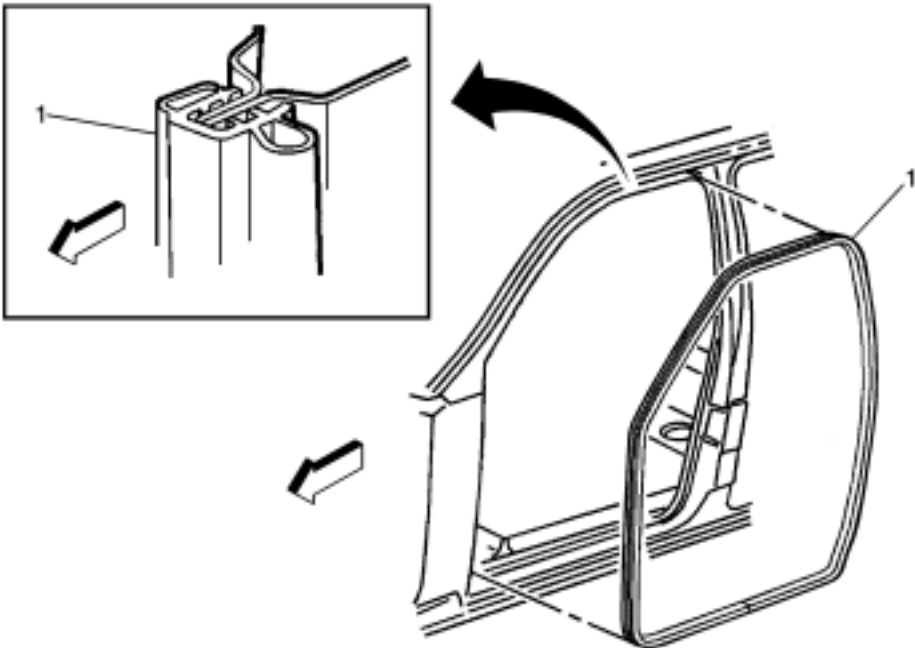

Callout	Component Name
<p>Preliminary Procedure</p> <p>1. Remove the upper center pillar trim. Refer to Center Pillar Upper Trim Panel Replacement .</p> <p>2. Remove the lower center pillar trim. Refer to Center Pillar Lower Trim Panel Replacement</p> <p>3. Remove the carpet retainer. Refer to Front Side Door Opening Floor Carpet Retainer Replacement .</p>	
1	<p>Front Side Door Weatherstrip Body Side</p> <p>Preliminary Procedure</p> <p>1. Starting in the center bottom of the weatherstrip, pull the weatherstrip upward and away from the pinch-weld flange.</p> <p>2. Start in the center bottom of the pinch-weld flange.</p> <p>3. Ensure that the weatherstrip and retainers are fully seated on the flange before installing the front carpet retainer.</p> <p>4. Inspect the door for proper operation.</p>