


Windshield Washer Nozzle Replacement

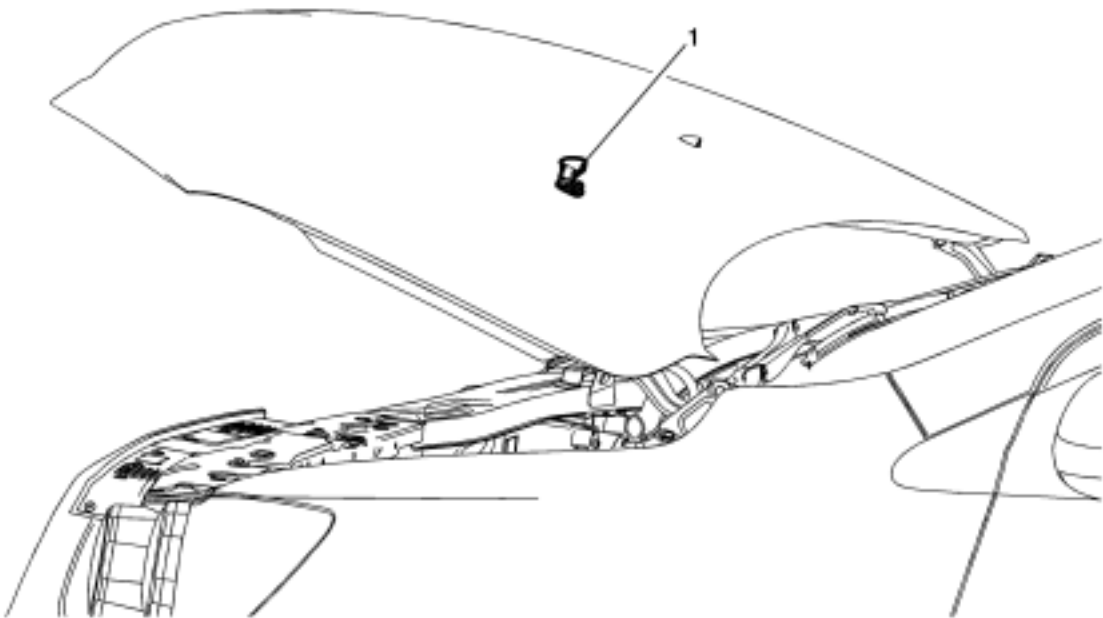

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the hood insulator. Refer to Hood Insulator Replacement .</p>	
1	<p>Windshield Washer Nozzle</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disconnect the windshield washer hose at the washer nozzle being serviced.2. Using two fingers, squeeze the locking tabs on the underside of the hood on the washer nozzle.3. Push the washer nozzle outward from the hood while rotating the washer nozzle to the right.4. Remove the windshield washer nozzle from the hood assembly.