


Windshield Washer Solvent Container Replacement

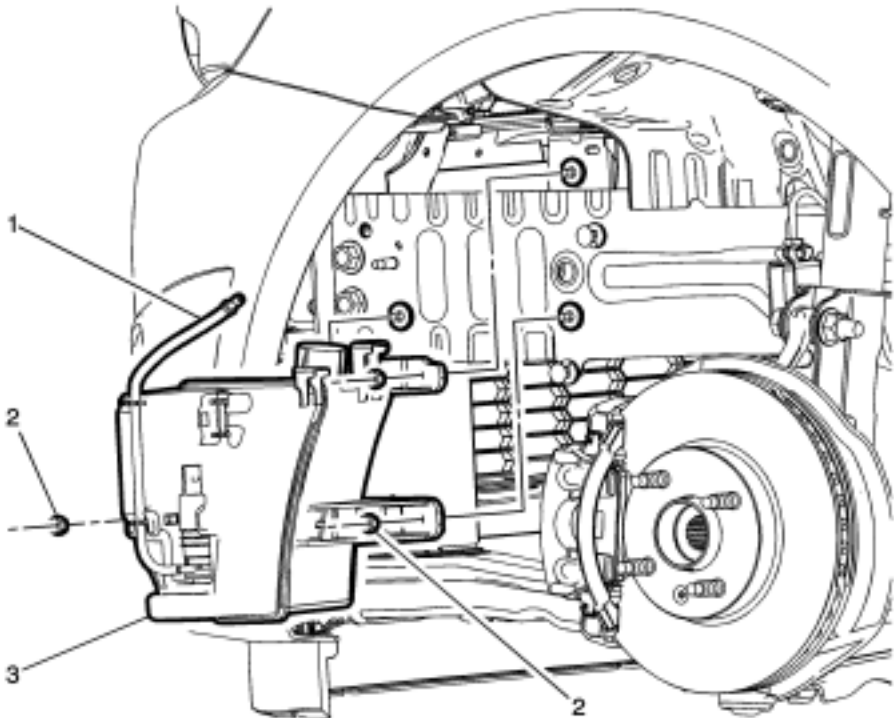

Callout	Component Name
<p>Preliminary Procedures</p> <p>1. Remove the windshield washer solvent container filler tube. Refer to Windshield Washer Solvent Container Filler Tube Replacement .</p> <p>2. Remove the left side front portion of the front wheelhouse liner. Refer to Front Wheelhouse Liner Replacement .</p> <p>3. Disconnect the windshield washer hose from the windshield washer solvent container washer pump hose.</p> <p>4. Disconnect the windshield washer pump electrical connector from the washer pump.</p>	
1	<p>Windshield Washer Solvent Container Washer Pump Hose</p> <p>Procedure</p> <p>Disengage the washer pump hose from the washer pump spout and the windshield washer container retention tabs.</p>
2	<p>Windshield Washer Solvent Container Nut (Qty: 3)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Tighten 5.0N·m (44lbin)</p>
3	<p>Windshield Washer Solvent Container</p> <p>Procedure</p> <p>1. Remove the windshield washer solvent container from the three studs on the front compartment front outer side rail and battery tray support.</p> <p>2. Remove the windshield washer pump from the windshield washer solvent container.</p> <p>3. Empty the windshield washer solvent into a suitable approved clean container.</p> <p>4. Transfer parts as needed.</p>