


Front Side Door Window Regulator Replacement

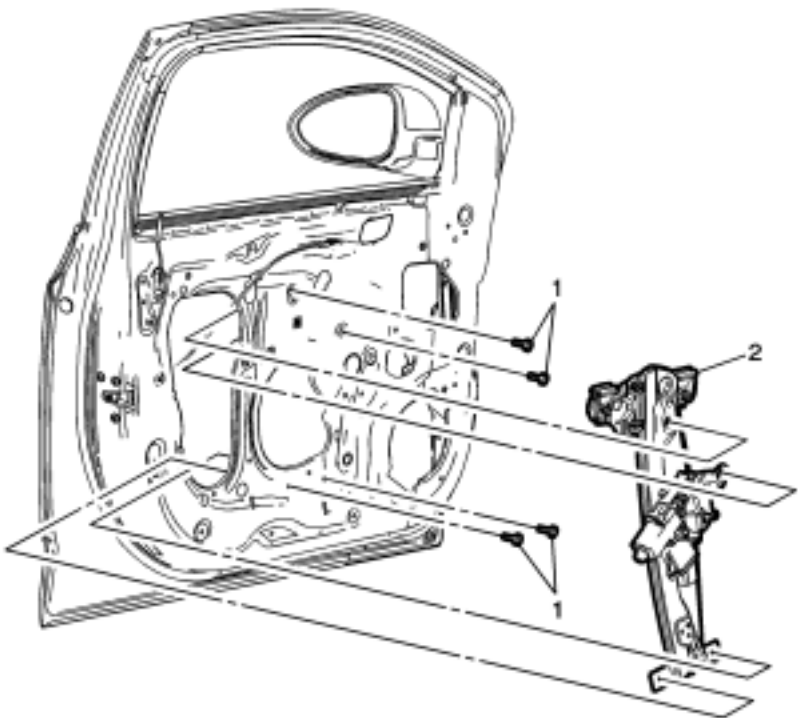

Callout	Component Name
<p>Warning: Refer to Glass and Sheet Metal Handling Warning .</p> <p>Preliminary Procedure</p> <p>Remove the front side door window from the guide. Do Not remove the window from the vehicle, raise the window to the fully up position, tape in place. Refer to Front Side Door Window Replacement .</p>	
1	<p>Front Side Door Window Regulator Screw (Qty: 4)</p> <p>Caution: Refer to Fastener Caution .</p> <p>Procedure</p> <ol style="list-style-type: none">1. Remove the front side door water deflector.2. Loosen the window guide nuts, Do Not remove the nuts from the guide.3. Disconnect the electric connector from the regulator motor. <p>Tighten 11 N·m (97 lbin)</p>
2	<p>Front Side Door Window Regulator</p> <p>Procedure</p> <ol style="list-style-type: none">1. Transfer the front side door window regulator motor. Refer to Front Side Door Window Regulator Motor Replacement .2. Inspect the door window for proper operation before installing the door trim panel.