


Rear Seat Cushion Replacement

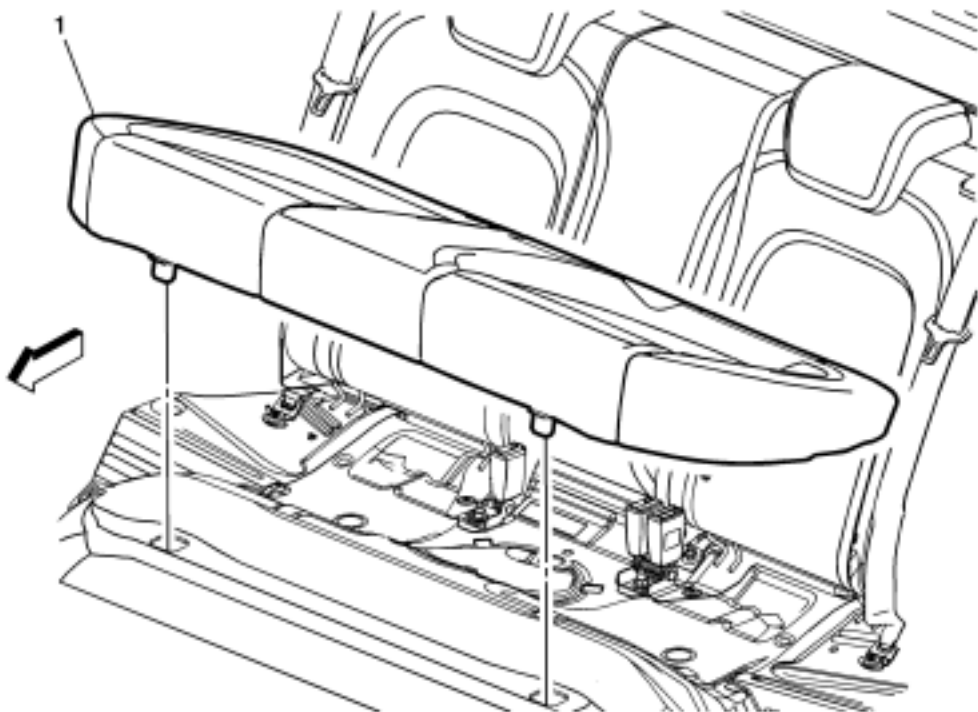

Callout	Component Name
1	<div>Rear Seat Cushion Replacement</div> <div><b>Preliminary Procedures</b><div><div>1. Release the rear seat center seat belts.</div><div>2. Lift up on the front of the seat cushion at the latch locations to disengage the cushion retainers from the floor.</div><div>3. Push down on the rear of the seat cushion to unhook the cushion from the floor wires.</div></div></div>