


Rear Seat Head Restraint Replacement

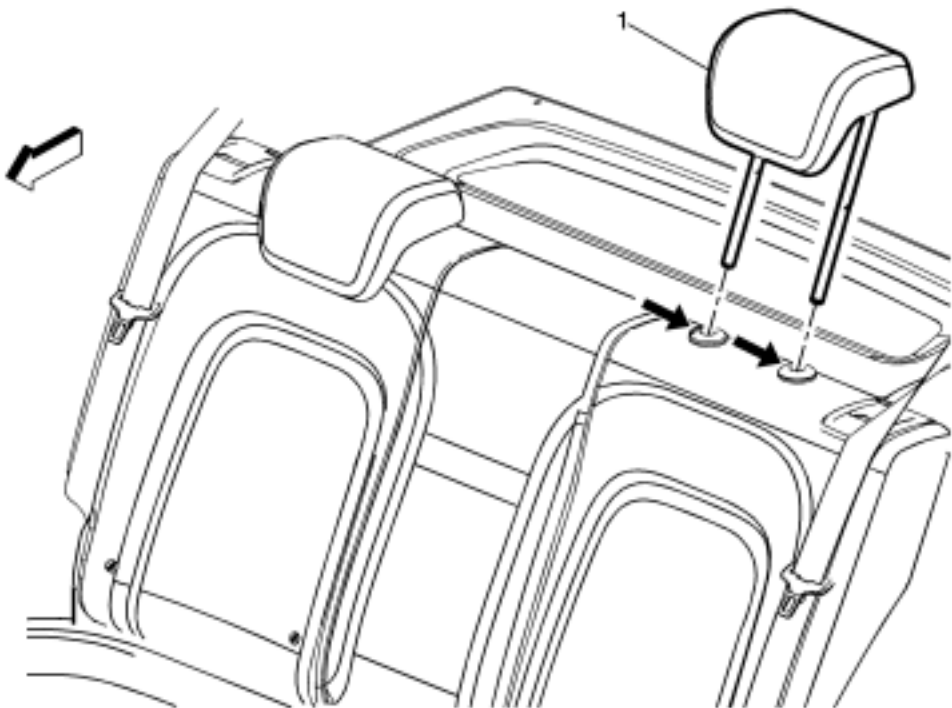

Callout	Component Name
1	<div>Rear Seat Head Restraint</div> <div>Preliminary Procedures</div> <div><div>1. Depress the large button on the head restraint guide and raise the head restraint to the full up position.</div><div>2. Depress the small button on the opposite head restraint guide and pull upward to remove from the seat.</div></div>