



Air Conditioning Compressor and Condenser Hose Replacement (1.6L LDE, LXV, and 1.8L 2H0)

Removal Procedure


1. Recover the refrigerant. Refer to [Refrigerant Recovery and Recharging](#)
2. Remove front bumper fascia. Refer to [Front Bumper Fascia Replacement](#)

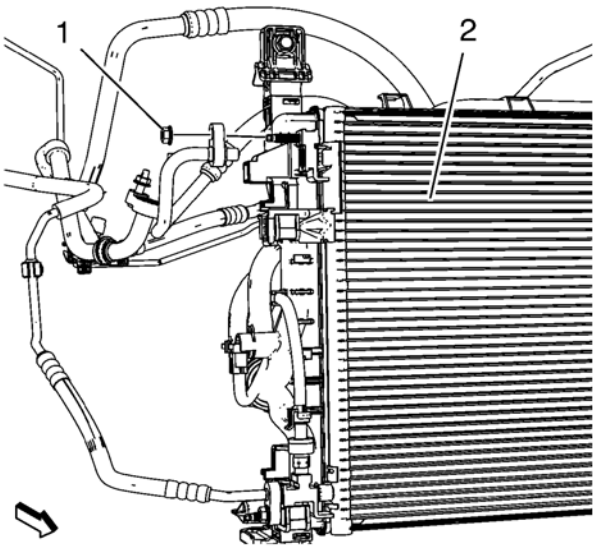

3. Remove A/C compressor and condenser hose nut (1) from A/C condenser (2).

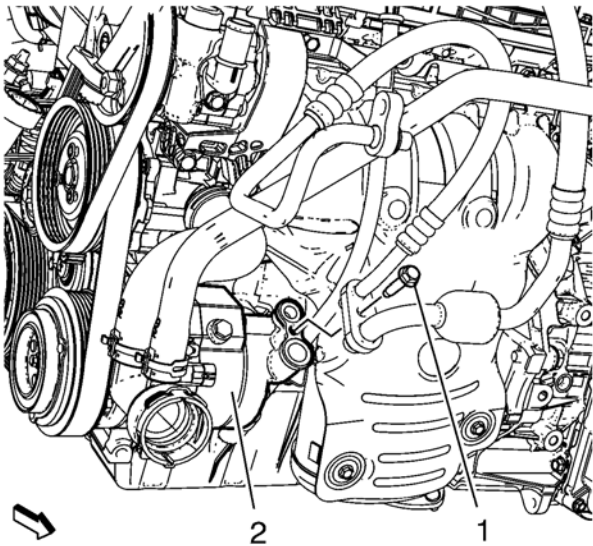

4. Remove A/C compressor and condenser hose bolt (1) from A/C compressor (2).

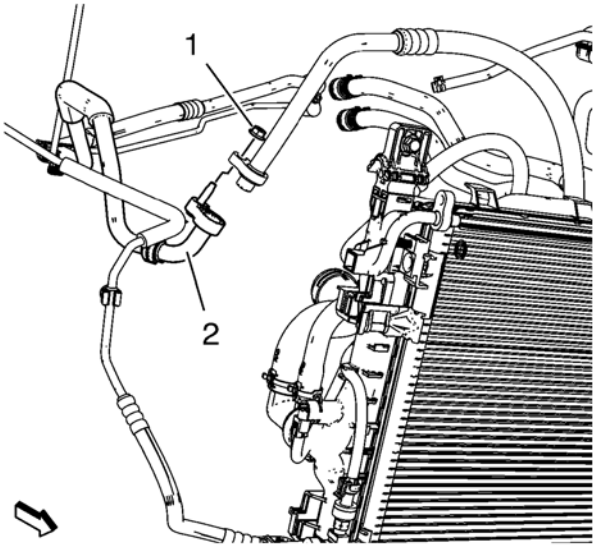

5. Remove A/C compressor and condenser hose nut (1) from refrigerant hose (2).
6. Remove A/C compressor and condenser hose.

Installation Procedure

Note: Use NEW O-ring seals. Refer to [Air Conditioning O-Ring Seal Replacement](#)

1. Install A/C compressor and condenser hose.

Caution: Refer to [Fastener Caution](#) in the Preface section.