


Headlining Trim Panel Replacement (With Sunroof)

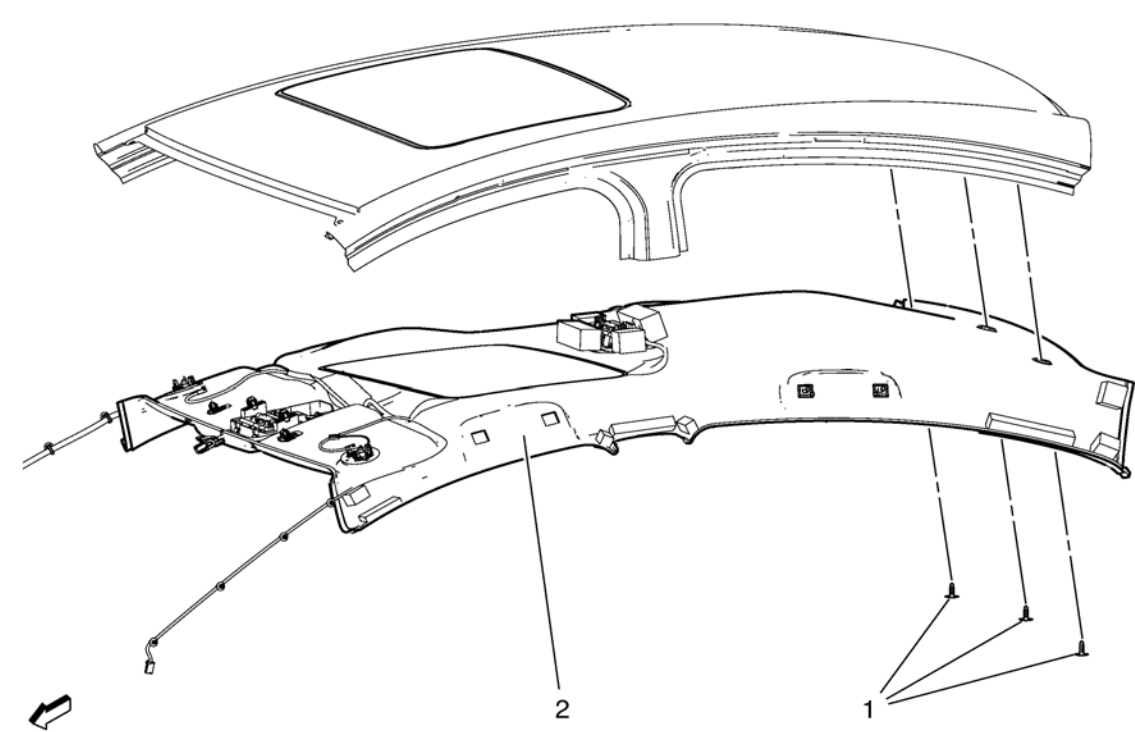

| Callout | Component Name |
|--|---|
| <p>Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.</p> <p>Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.</p> <p>Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.</p> <p>Preliminary Procedures</p> <ol style="list-style-type: none">1. Disable the SIR system. Refer to SIR Disabling and Enabling2. Remove the sunshade supports. Refer to Sunshade Support Replacement3. Remove the roof console. Refer to Roof Console Replacement4. Remove the windshield outside moisture sensor cover. Refer to Windshield Outside Moisture Sensor Cover Replacement5. Remove the assist handles. Refer to Assist Handle Replacement6. Remove the windshield garnish moldings. Refer to Windshield Garnish Molding Replacement7. Remove the center pillar upper garnish moldings. Refer to Center Pillar Upper Garnish Molding Replacement8. Remove the quarter window garnish moldings. Refer to Quarter Window Garnish Molding Replacement9. Move the front seat fully forward and recline. | |
| 1 | Headliner Trim Panel Retainer (Qty: 3) |
| 2 | <div>Headliner Trim Panel Assembly</div> <p>Procedure</p> <p>Disconnect the electrical connectors.</p> |