

## Power Steering Pump Belt Replacement

### Special Tools


CH 49800 Installer Power Steering Pump Belt

For equivalent regional tools, refer to [Special Tools](#).

### Removal Procedure


**Caution:** Do not use belt dressing on the drive belt. Belt dressing causes the breakdown of the composition of the drive belt. Failure to follow this recommendation will damage the drive belt.

1. Open the hood.

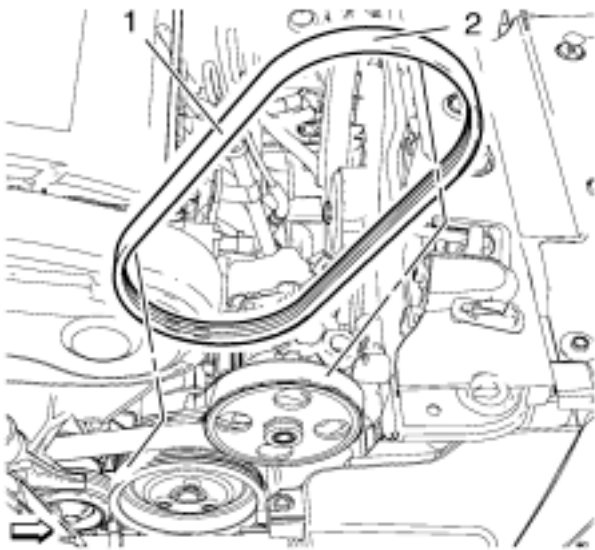

2. Cut the power steering pump belt (2) with a appropriate cutting tool at position (1).
3. Remove the power steering pump belt (2)

### Installation Procedure

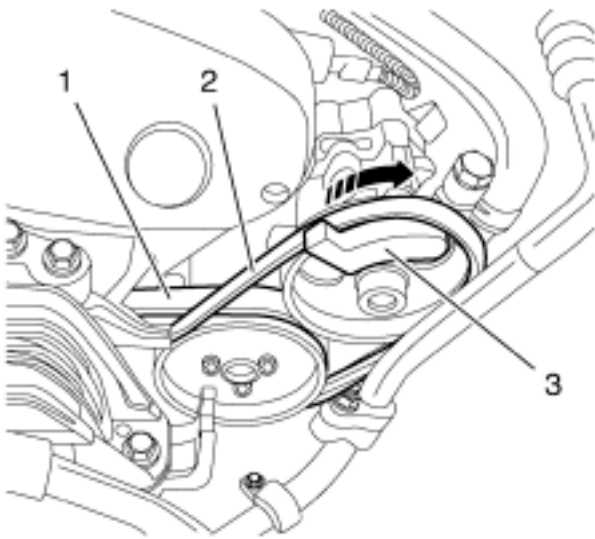

1. Relieve the tension of the drive belt (1). Refer to [Drive Belt Replacement](#).
2. Install CH-49800 installer (3) on the power steering pump pulley.
3. Install NEW power steering belt (2) aligning pulley water pump.
4. Rotate the power steering pump pulley clockwise using hex wrench on the shaft power steering pump pulley.
5. Remove the CH-49800 installer (3).
6. Check the belt is installed clearly.
7. Install the drive belt. Refer to [Drive Belt Installation](#)
8. Close the hood.