


# Steering Knuckle Replacement

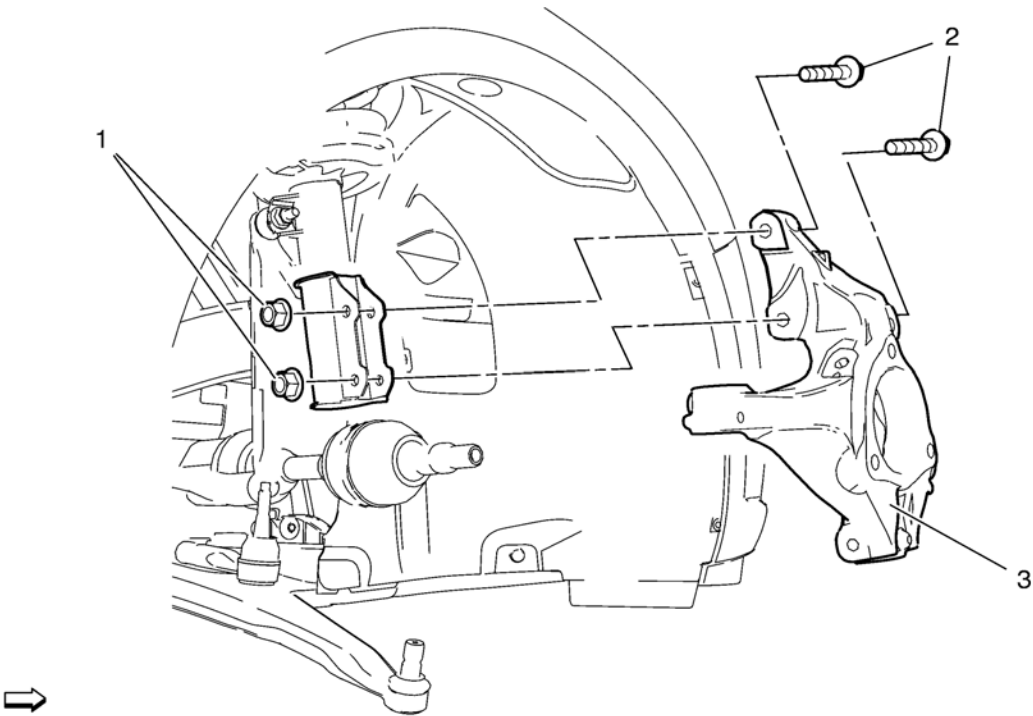

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>1. Raise and support the vehicle. Refer to <a href="#">Lifting and Jacking the Vehicle</a>.</p> <p>2. Remove the wheel bearing and hub assembly. Refer to <a href="#">Front Wheel Bearing and Hub Replacement</a>.</p> <p>3. Separate the outer tie rod end from the knuckle. Refer to <a href="#">Steering Linkage Outer Tie Rod Replacement</a>.</p> <p>4. Remove the wheel bearing/hub. Refer to <a href="#">Lower Control Arm Replacement</a>.</p>	
1	Steering Knuckle Bolt (Qty: 2)
2	Steering Knuckle Nut (Qty: 2) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 90 N·m(66 lb ft) + 60-70 degrees
3	Steering Knuckle