


Inflatable Restraint Sensing and Diagnostic Module Replacement

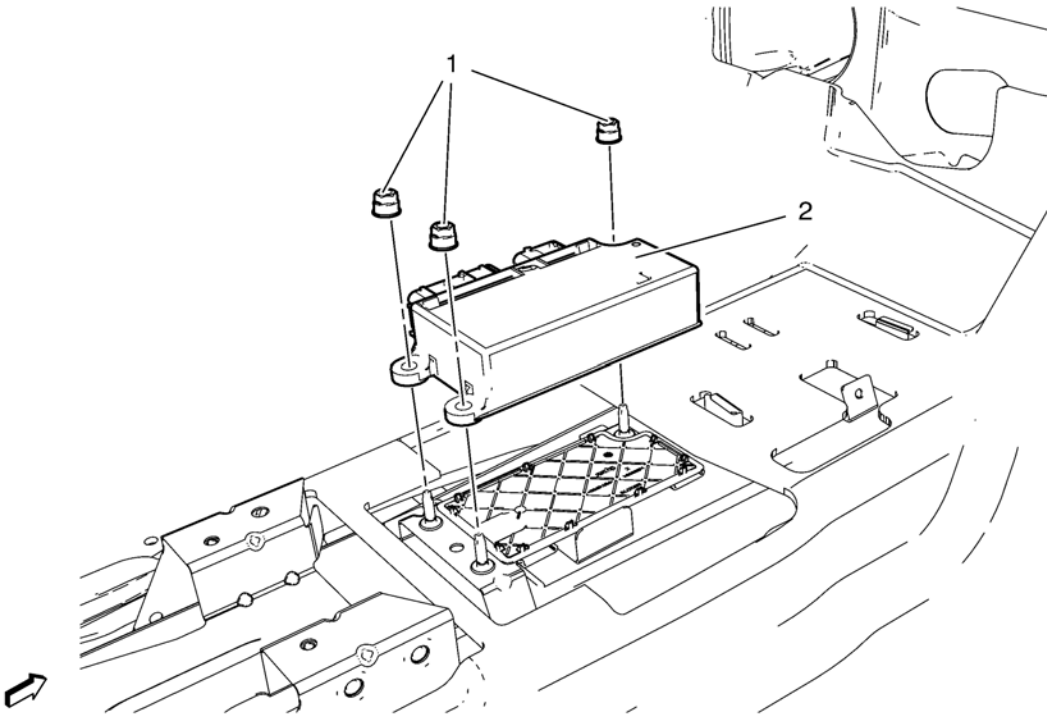

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedure</p> <p>1. Disable the supplemental inflatable restraint (SIR) system. Refer to SIR Disabling and Enabling.</p> <p>2. Remove the instrument panel lower trim panel. Refer to Instrument Panel Lower Trim Panel Replacement - Left Side and Instrument Panel Lower Trim Panel Replacement - Right Side</p> <p>3. Disconnect the electrical connector.</p> | |
| 1 | <p>Inflatable Restraint Sensing and Diagnostic Module Nut (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 10 N·m(89 lb in)</p> |
| 2 | <p>Inflatable Restraint Sensing and Diagnostic Module Assembly</p> <p>Tip If installing a replacement module, program the module. Refer to Control Module References</p> |