


Power Steering Pump Pulley Replacement

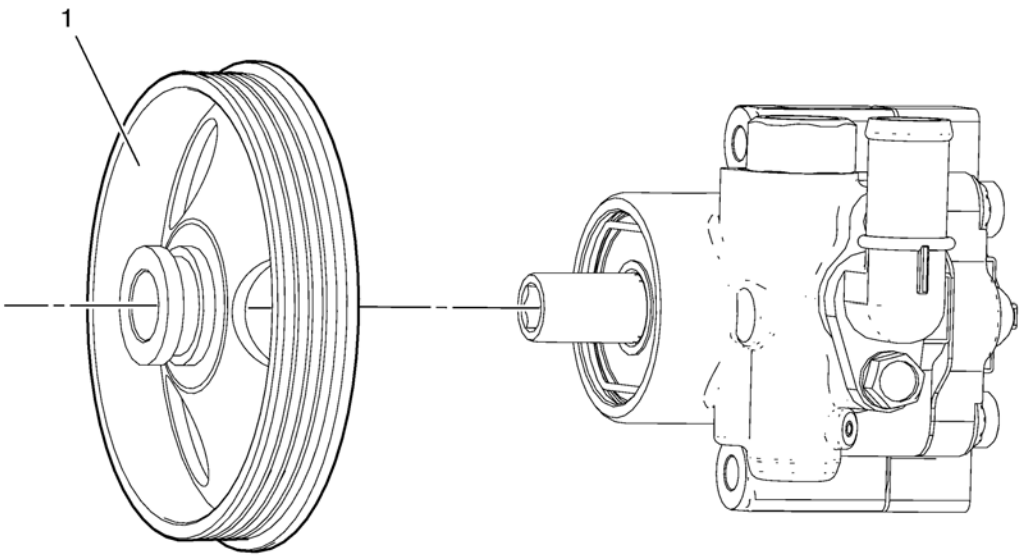

Callout	Component Name
Preliminary Procedure Remove the power steering pump. Refer to Power Steering Pump Replacement .	
1	<div>Power Steering Pump Pulley</div> <div>Procedure 1. Use <i>CH 25034-D</i> Pulley Remover to remove the power steering pump pulley. 2. Use <i>CH 25033-C</i> Pulley Installer to install the power steering pump pulley.</div> <div>Special Tools <ul style="list-style-type: none"><i>CH 25034-D</i> Pulley Remover<i>CH 25033-C</i> Pulley Installer</div> <div>For equivalent regional tools, refer to Special Tools.</div>