


## Engine Mount Replacement

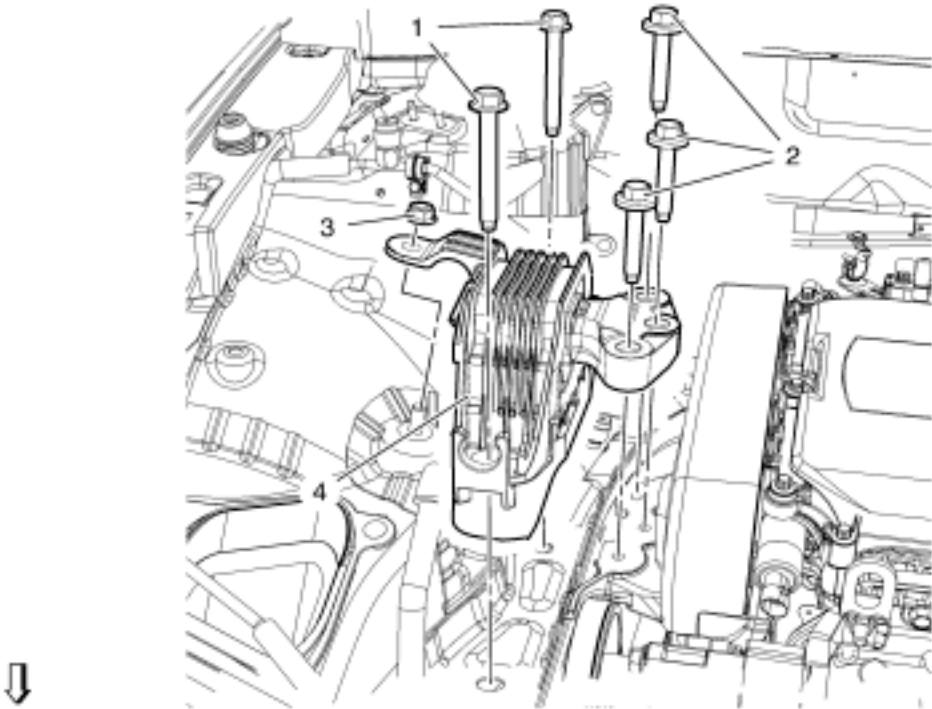

Callout	Component Name
<b>Preliminary Procedures</b>  1. Remove the air cleaner assembly. Refer to <a href="#">Air Cleaner Assembly Replacement</a> . 2. Support the engine. Install a suitable engine lifting device. Install a suitable cable at the 3 engine lift brackets and at the engine lifting device.	
1	Engine Mount Bolt (Qty: 2)  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 62 N·m (46 lb ft)
2	Engine Mount Bracket Bolt (Qty: 3)  <b>Note:</b> Use only NEW bolts.  <b>Tighten</b> 50 N·m + 60°-75° (37 lb ft + 60°-75°)
3	Engine Mount Nut  <b>Tighten</b> 62 N·m (46 lb ft)
4	Engine Mount