

Rear Axle Replacement


Special Tools

EN 45059 Torque Angle Sensor Kit


For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure


1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#).

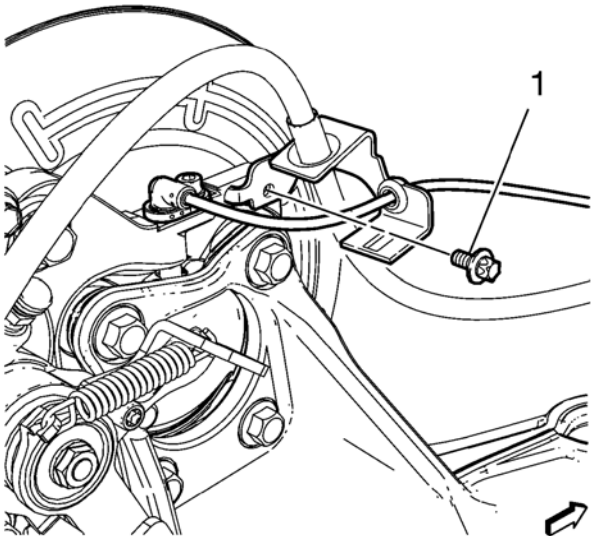

3. Remove the both brake hose bolts (1) attaching the hose to the rear brake caliper bracket.

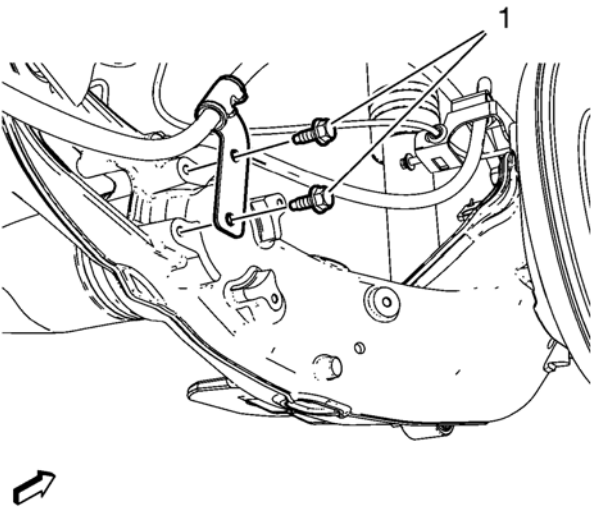

4. Remove rear parking brake cable bracket bolts (1) from the rear axle.

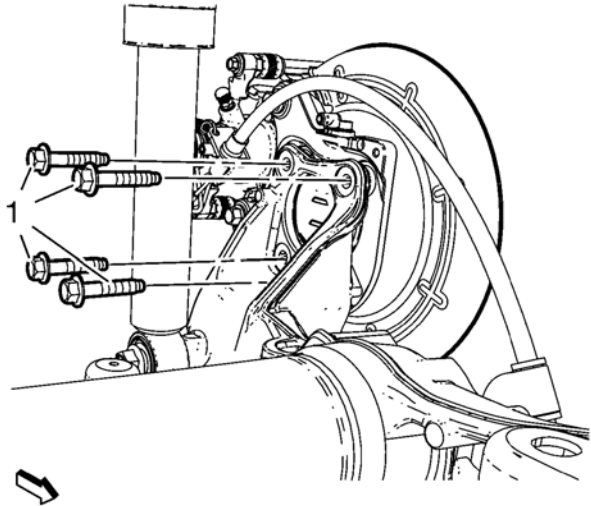

5. Remove the wheel bearing/hub mounting bolts (1).