


Driver or Passenger Seat Back Cushion Cover and Pad Replacement

Removal Procedure


Warning: Refer to [SIR Warning](#) in the Preface section.

Warning: Replace the passenger presence system as a complete assembly to prevent possible injury to the occupant. The bladder, the pressure sensor, the seat cushion, and the control module are assembled and calibrated as a unit. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.

1. Remove driver or passenger seat. Refer to [Driver or Passenger Seat Replacement](#).
2. Remove front seat adjuster handle, if equipped.
3. Remove front seat recliner handle. Refer to [Driver or Passenger Seat Recliner Handle Replacement](#).
4. Remove seat cushion inner trim panel. Refer to [Front Seat Cushion Inner Trim Panel Replacement](#).
5. Remove seat cushion outer trim panel. Refer to [Front Seat Cushion Outer Trim Panel Replacement](#).
6. Remove front seat head restraint guide. Refer to [Front Seat Head Restraint Guide Replacement](#).

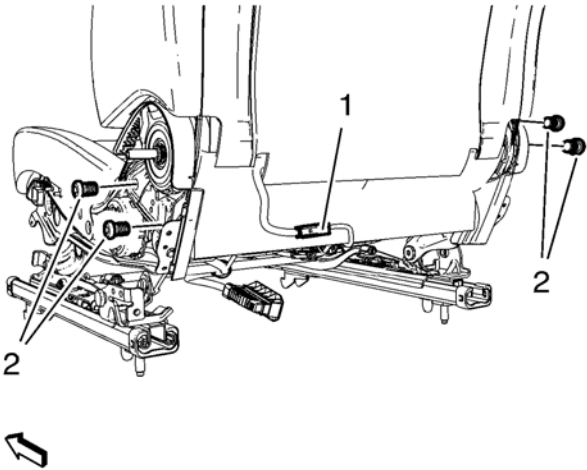

7. Detach cushion cover from backrest below.
8. Release and disconnect wiring harness plug (1), if equipped.
9. Remove 4 front seat backrest screw (2).
10. Remove backrest.

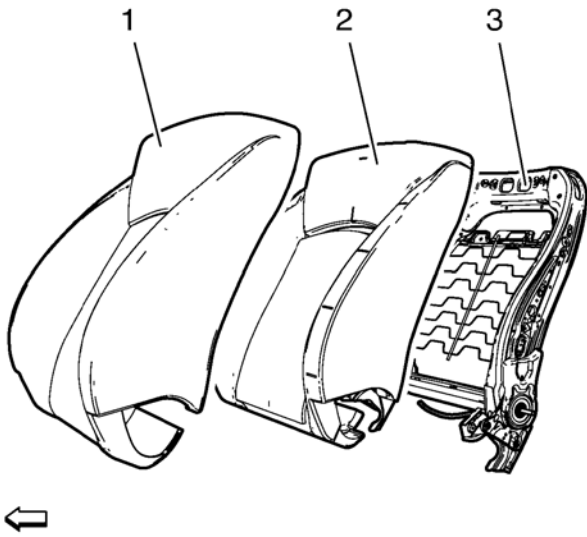

11. Remove cushion cover (1) on backside.
 - Open 2 zippers on backside.
 - Loosen cushion covering all the way around.
12. Remove front seat back cushion cover (1).
 - Detach cushion cover from frame (3).
 - Remove cushion cover (1) from Velcro.
13. Remove front seat back cushion pad (2).

Installation Procedure