

Windshield Replacement

Special Tools

- *BO-46974* Glass Removal System
- *BO-641* Suction Holder

For equivalent regional tools, refer to [Special Tools](#).


Removal Procedure

Warning: Refer to [Cracked Window Warning](#) in the Preface section.

Warning: Refer to [Glass and Sheet Metal Handling Warning](#) in the Preface section.

Note: Position the vehicle on level ground and move the front wheels to the straight-ahead position.

1. Disconnect battery.
2. Remove air inlet grille panel. Refer to [Air Inlet Grille Panel Replacement](#).
3. Remove windshield garnish molding. Refer to [Windshield Garnish Molding Replacement](#).
4. Remove inside rearview mirror. Refer to [Inside Rearview Mirror Replacement](#).

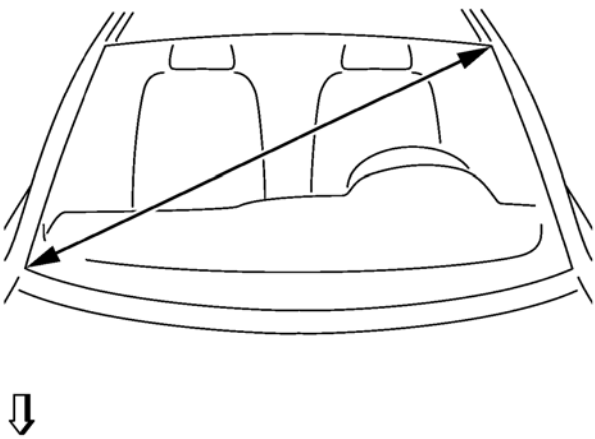


5. Use *BO-46974* system to remove the windshield.

Warning: Refer to [Defroster Outlet Warning](#) in the Preface section.

6. Take the diagonal measurement of the windshield.
7. Cut cutting wire into four times lengths.

Ca. 6200 mm (244.093 in), the circumference of the corresponding roll of wire is approximately 1000 mm (39.369 in).

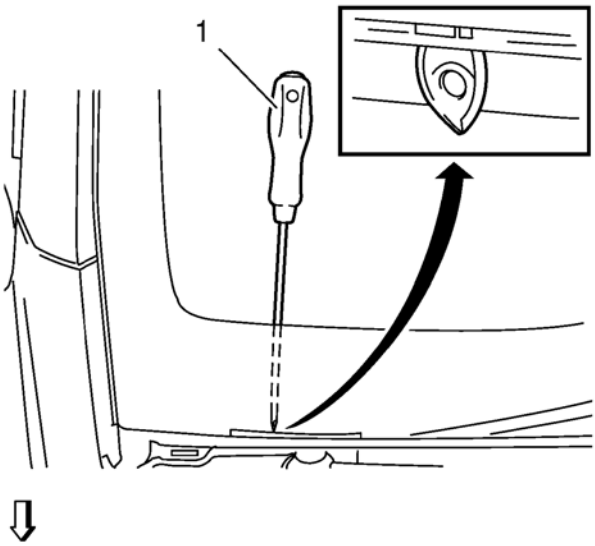

8. Heat the awl with a suitable tool.
9. Stick the awl (1) with adhesive bed in the area of the front wall.

Ensure that the windshield is not damaged in the process, otherwise stress cracks in the windshield may occur.

10. Pull the wire through.
 - Thread the cutting wire into the hole of the awl and bend it over.
 - Pull the cutting wire with the awl to the middle of the steering wheel in the interior.