

Rear Wheel Bearing and Hub Replacement (Drum Brake)


Special Tools

EN 45059 Torque Angle Sensor Kit


For equivalent regional tools, refer to [Special Tools](#).

Removal Procedure


1. Raise and suitably support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#).
3. Remove the brake drum. Refer to [Brake Drum Replacement](#).

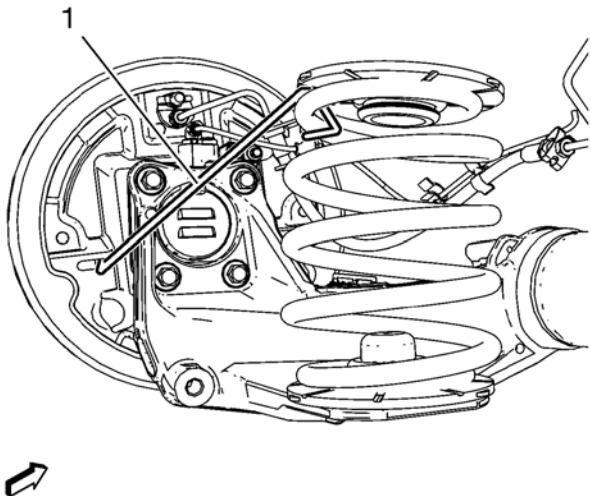

4. Remove the plug from the drum brake actuator access hole in the backing plate. Using the access hole, install a heavy mechanic wire (1) in order to support the brake backing plate.

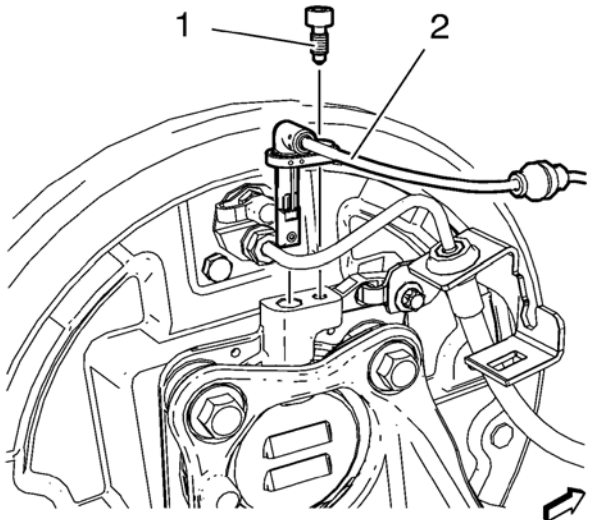

5. Remove the wheel speed sensor bolt (2).
6. Remove the wheel speed sensor (1).

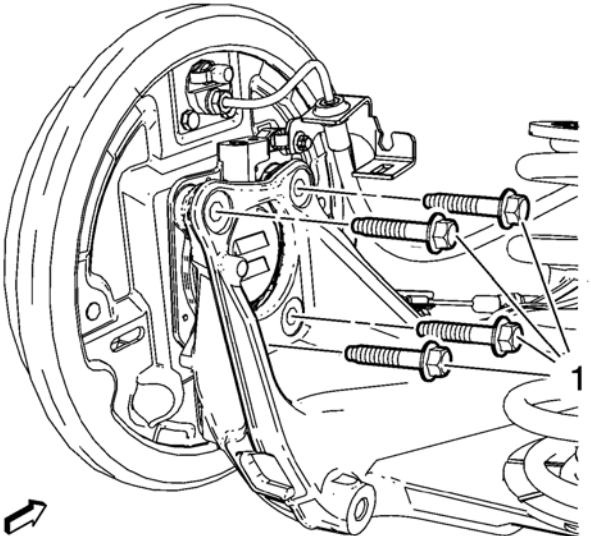

7. Remove the wheel bearing/hub mounting bolts (1).