


Rear Seat Armrest Replacement

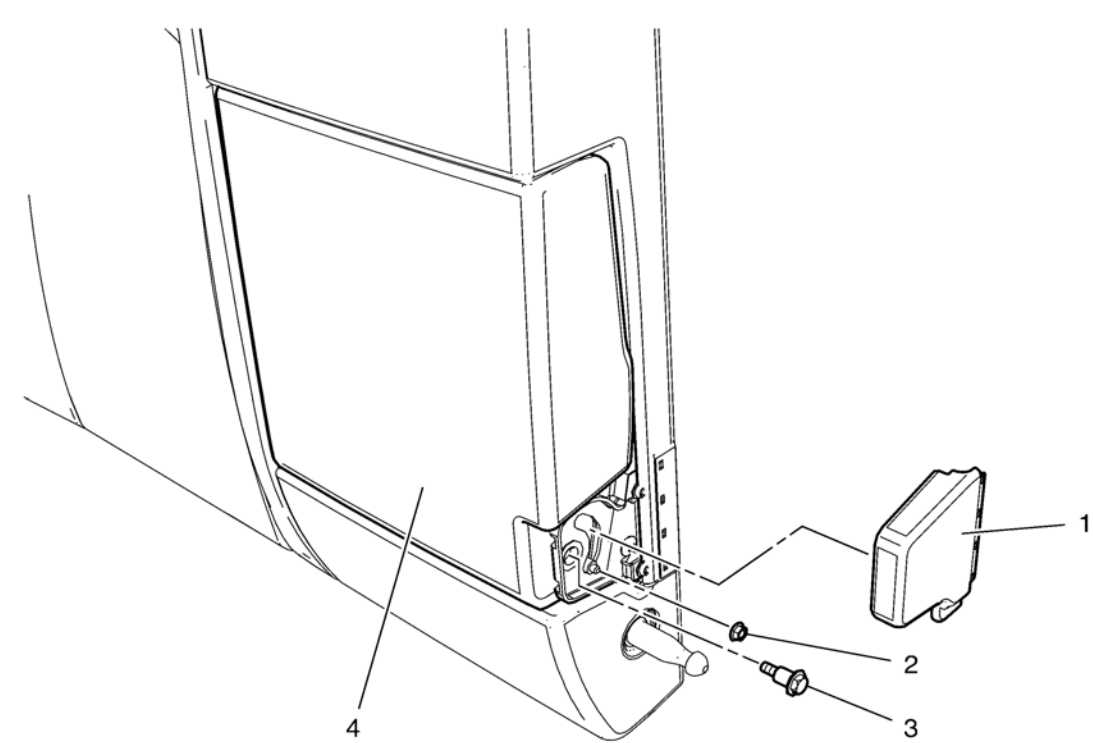

Callout	Component Name
Preliminary Procedure Remove rear seat back - right side. Refer to Rear Seat Replacement	
1	Armrest Hinge Cover
2	Armrest Hinge Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 4.5 N·m (40 lb in)
3	Armrest Hinge Bolt Tighten 9 N·m (80 lb in)
4	Armrest