

Rear Axle Bushing Replacement

Special Tools


- CH 6616 Hydraulic Hand Pump
- CH 6615-10 Hydraulic Cylinder
- CH-48377-1 Chisel
- CH-49233 Adapter
- CH 906-42 Adapter

For equivalent regional tools. Refer to [Special Tools](#)


Removal Procedure

Warning: Use of eye goggles is necessary to prevent personal injury.

1. Remove the rear axle. Refer to [Rear Axle Replacement](#)
2. With the aid of second mechanic, place rear axle onto work bench.

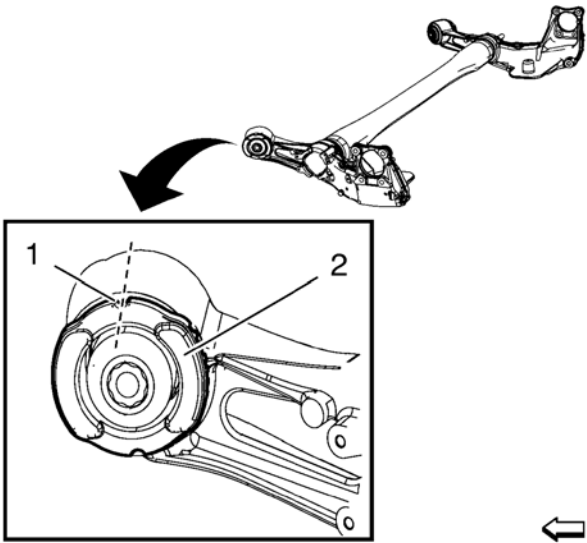

3. Mark installation position (dashed line) for rear axle bushing (2) on rear axle using a permanent marker.
Use upper gap (1) of bushing for alignment.

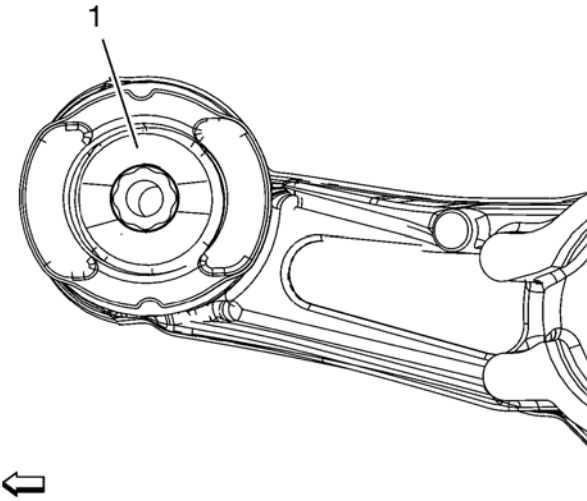

4. Drill 8 times all around through rubber (1) bushings with drill 10 mm (0.4 in)

