


Steering Linkage Outer Tie Rod Replacement

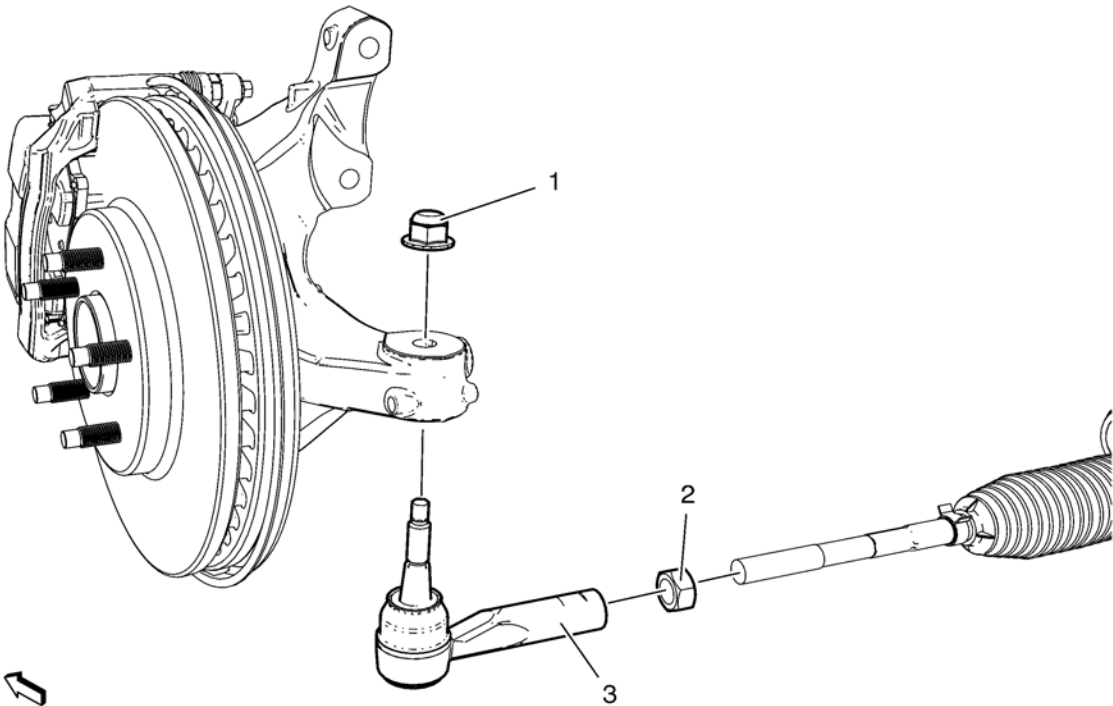

Callout	Component Name
Preliminary Procedure Remove the tire and wheel assembly. Refer to Tire and Wheel Removal and Installation .	
1	Steering Linkage Tie Rod Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 35 N·m (26 lb ft)
2	Steering Linkage Inner Tie Rod Nut Tighten 60 N·m (44 lb ft)
3	Steering Linkage Outer Tie Rod Procedure 1. Use <i>CH-161-B</i> puller to separate the steering linkage outer tie rod from the steering knuckle. 2. Inspect the steering linkage inner tie rod for bent or damaged threads. 3. Clean the tapered surface of the steering knuckle. 4. Center the steering angle sensor. Refer to Steering Angle Sensor Centering . 5. Check and adjust wheel alignment. Refer to Wheel Alignment Measurement . Special Tools <i>CH-161-B</i> Puller For equivalent regional tools, refer to Special Tools .